

AVC-LAN and AVC-LAN Plus

Quick Training Guide – QT611G



Click the ENTER button to view the Quick Training Guide.



Code CLR Memory CLR

LAN Mon

Recheck









[©]Toyota Motor Sales, U.S.A., Inc., September 12, 2012



N





Accessing AVC	and Interpreting -LAN DTCs	Accessing and Interpreting AVC-LAN Plus DTCs	Descriptions for AVC-LAN and AVC-LAN Plus DTCs	AVC-LAN & AVC-LAN Plus Device Codes
Descriptio	ns for AVC-LAN & AVC	C-LAN Plus DTCs, Page 1		Pag
DTC Code	Detection Item	Trouble Area		ge 1
01-21	ROM Error	Display and navigation assembly		
01-22	RAM Error	Display and navigation assembly		
01-D5	Absence of Registration Unit	 Power source circuit of component sho AVC-LAN circuit between display and shown by sub-code Component shown by cub code 	own by sub-code navigation assembly and component	age 2
01-D6	No Master	 Display and navigation assembly power Power source circuit of component where a stored this code Component which has stored this code Display and navigation assembly 	er source circuit nich has stored this code navigation assembly and component e	Page 3 Page
01-D7	Connection Check Error	 Display and navigation assembly power Power source circuit of component where the AVC-LAN circuit between display and the which has stored this code Component which has stored this code Display and navigation assembly 	er source circuit nich has stored this code navigation assembly and component e	Page 5
01-D8	No Response for Connection Check	 Power source circuit of component show AVC-LAN circuit between display and shown by sub-code Component shown by sub-code 	own by sub-code navigation assembly and component	Page 6
01-D9	Last Mode Error	 Power source circuit of component show AVC-LAN circuit between display and shown by sub-code Component shown by sub-code 	own by sub-code navigation assembly and component	
01-DA	No Response Against ON / OFF Command	 Power source circuit of component sho AVC-LAN circuit between multi-display Component shown by sub-code 	own by sub-code / and component shown by sub-code.	

Accessing AVC	g and Interpreting -LAN DTCs	Accessing and Interpreting AVC-LAN Plus DTCs	Descriptions for AVC-LAN and AVC-LAN Plus DTCs	AVC-LAN & AVC-LAN Plus Device Codes
Descriptio	ons for AVC-LAN & AV	C-LAN Plus DTCs, Page 2		
DTC Code	Detection Item	Trouble Area		
01-DB	Mode Status Error	 Power source circuit of componer AVC-LAN circuit between display shown by sub-code Component shown by sub-code 	nt shown by sub-code and navigation assembly and component	
01-DC	Transmission Error	If same sub-code is recorded in of supply and communication system	ther components, check harness for power n of all components shown by code	
01-DD	Master Reset	 Display and navigation assembly p AVC-LAN circuit between display which has stored this code Display and navigation assembly Component which has stored this 	oower source circuit and navigation assembly and component code	
01-DE	Slave Reset	 Power source circuit of componer AVC-LAN circuit between display a shown by sub-code Component shown by sub-code 	nt shown by sub-code and navigation assembly and component	
01-DF	Master Error	 Display and navigation assembly p AVC-LAN circuit between display which has stored this code AVC-LAN circuit between display point between display and navigation assembly Component which has stored this 	oower source circuit and navigation assembly and component and navigation assembly and radio receiver code	
01-E0	Registration Complete Indication Error			
01-E2	ON / OFF Indication Parameter Error	Display and navigation assembly		
01-E3	Registration Demand Transmission			
01-E4	Multiple Frame Incomplete			

Page 1

Page 2

Page 3

Page 4

Page 5

Page 6

Accessing AVC-	and Interpreting LAN DTCs	Accessing and Interpreting AVC-LAN Plus DTCs	Descriptions for AVC-LAN and AVC-LAN Plus DTCs	AVC-LAN & AVC-LAN Plus Device Codes
Description	ns for AVC-LAN & AVC	Pa		
DTC Code	Detection Item	Trouble Area		ge -
21-10	Panel Switch Error	Display and navigation assembly		
21-11	Touch Switch Error	Display and navigation assembly		
23-10	Panel Switch Error	Display and navigation assembly		age
23-11	Touch Switch Error	Display and navigation assembly		2
24-10	Panel Switch Error	Display and navigation assembly		
24-11	Touch Switch Error	Display and navigation assembly		Pag
25-10	Panel Switch Error	Display and navigation assembly		စီပြီး
25-11	Touch Switch Error	Display and navigation assembly		
34-10	Error in Picture Circuit	Display and navigation assembly		
34-11	No Current in Back-light	Display and navigation assembly		ge 4
45-10	DVD Changer Mechanical Error	Radio receiver		
45-11	DVD Insertion and Ejection Error	Radio receiver		Page 5
45-42	Disc cannot be Read	DiscRadio receiver		
45-43	DVD-ROM Abnormal	DiscRadio receiver		age o
45-44	DVD Malfunction	Radio receiver		
45-45	Eject Error	Radio receiver		
45-46	Scratched/Reversed Disc	DiscRadio receiver		
45-47	High Temperature	Radio receiver		
45-48	Excess Current	Radio receiver]

Accessing AVC-	and Interpreting LAN DTCs	Accessing and Interpreting AVC-LAN Plus DTCs	Descriptions for AVC-LAN and AVC-LAN Plus DTCs	AVC-LAN & AVC-LAN Plus Device Codes
Description	ns for AVC-LAN & AVC			
DTC Code	Detection Item	Trouble Area		
45-50	Tray Insertion / Ejection Error	Radio receiver		
45-51	Elevator Error	Radio receiver		
45-52	Clamp Error	Radio receiver		
45-78	DSP Error	Radio receiver		
45-7E	No Playable Files	DiscRadio receiver		
45-7F	Copyright Protection Error	DiscRadio receiver		
57-47	Bluetooth Module Initialization Failed	Display and navigation assembly		
58-10	Gyro Error	Display and navigation assembly		
58-11	GPS Receiver Error	Display and navigation assembly		
58-17	HDD Error	Disc player disc		
58-41	GPS Antenna Power Source Error	Harness or connectorNavigation antenna assemblyDisplay and navigation assembly		
58-42	Map Disc Read Error	Disc player disc		
58-43	SPD Signal Error	Speed signal circuitDisplay and navigation assembly		
58-44	Player Error	Display and navigation assembly		
58-45	High Temperature	Display and navigation assembly		
5C-40	Camera Picture Error	 Harness or connector Television camera Display and navigation assembly 		

Accessing AVC	and Interpreting -LAN DTCs	Accessing and Interpreting AVC-LAN Plus DTCs	Descriptions for AVC-LAN and AVC-LAN Plus DTCs	AVC-LAN & AVC-LAN Plus Device Codes			
Descriptio	Descriptions for AVC-LAN & AVC-LAN Plus DTCs, Page 5						
DTC Code	Detection Item	Trouble Area					
60-11	FM Tuner PLL does not Lock	Radio receiver					
60-42	Tuner Power Source Error	Radio receiver					
60-43	AM Tuner Error	Radio receiver					
60-44	FM Tuner Error	Radio receiver					
60-50	Malfunction in Internal IC	Radio receiver					
69-42	File on HDD cannot be Played	Display and navigation assembly					
80-10	Gyro Error	Display and navigation assembly					
80-11	GPS Receiver Error	Display and navigation assembly					
80-17	HDD Error	Disc player disc					
80-41	GPS Antenna Power Source Error	Harness or connectorNavigation antenna assemblyDisplay and navigation assembly					
80-42	Map Disc Read Error	Disc player disc					
80-43	SPD Signal Error	Speed signal circuitDisplay and navigation assembly					
80-44	Player Error	Display and navigation assembly					
9E-40	Device Error	Display and navigation assembly					
9E-41	Sound Recording Data Overflow	DiscRadio receiverDisplay and navigation assembly					
C0-11	Satellite Radio Tuner Internal Circuit Error 1	Satellite radio tuner					

Accessing AVC	and Interpreting -LAN DTCs	1	Accessing and Interpreting AVC-LAN Plus DTCs	Descriptions for AVC-LAN and AVC-LAN Plus DTCs	AVC-LAN & AVC-LAN Plus Device Codes			
Descriptio	escriptions for AVC-LAN & AVC-LAN Plus DTCs, Page 6							
DTC Code	Detection Item	Tr	ouble Area			qe 1		
C0-12	Satellite Radio Tuner Internal Circuit Error 2	•	Satellite radio tuner					
C0-13	Satellite Radio Tuner Internal Circuit Error 3	•	Satellite radio tuner			Dage 2		
C0-14	Satellite Radio Tuner Internal Circuit Error 4	•	Satellite radio tuner					
C0-15	Satellite Radio Tuner Internal Circuit Error 5	•	Satellite radio tuner			Page 3		
C0-16	Satellite Radio Tuner Internal Circuit Error 6	•	Satellite radio tuner					
					-	age 4		

Page 5

Accessing and Interpre AVC-LAN DTCs	ting Accessing AVC-L	g and Interpreting AN Plus DTCs	Descriptions for AVC-LAN and AVC-LAN Plus DTCs	AVC-LAN & AVC-LAN Plus Device Codes				
AVC-LAN & AVC-LAN Plus Device Codes								
Address No.	Name	Address No.	Name					
110	EMV	120	AVX					
128	1DIN TV	140	AVN					
144	G-BOOK	178	NAVI					
17C	MONET	190	AUDIO					
1AC	CAMERA-C	1B0	Rr-TV					
1C0	Rr-CONT	19D	BT-HF					
1C4	PANEL	1C6	G/W					
1C8	FM-M-LCD	1D8	CONT-SW					
1EC	Body	118	EMVN					
1F1	XM	1F2	SIRIUS					
230	TV	240	CD-CH2					
250	DVD-CH	280	CAMERA					
360	CD-CH1	3A0	MD-CH					
17D	TEL	440	DSP-AMP					
530	ETC	1F6	RSE					
1A0	DVD-P	1D6	CLOCK					
238	DTV	480	AMP					