


G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[2GR-FSE]

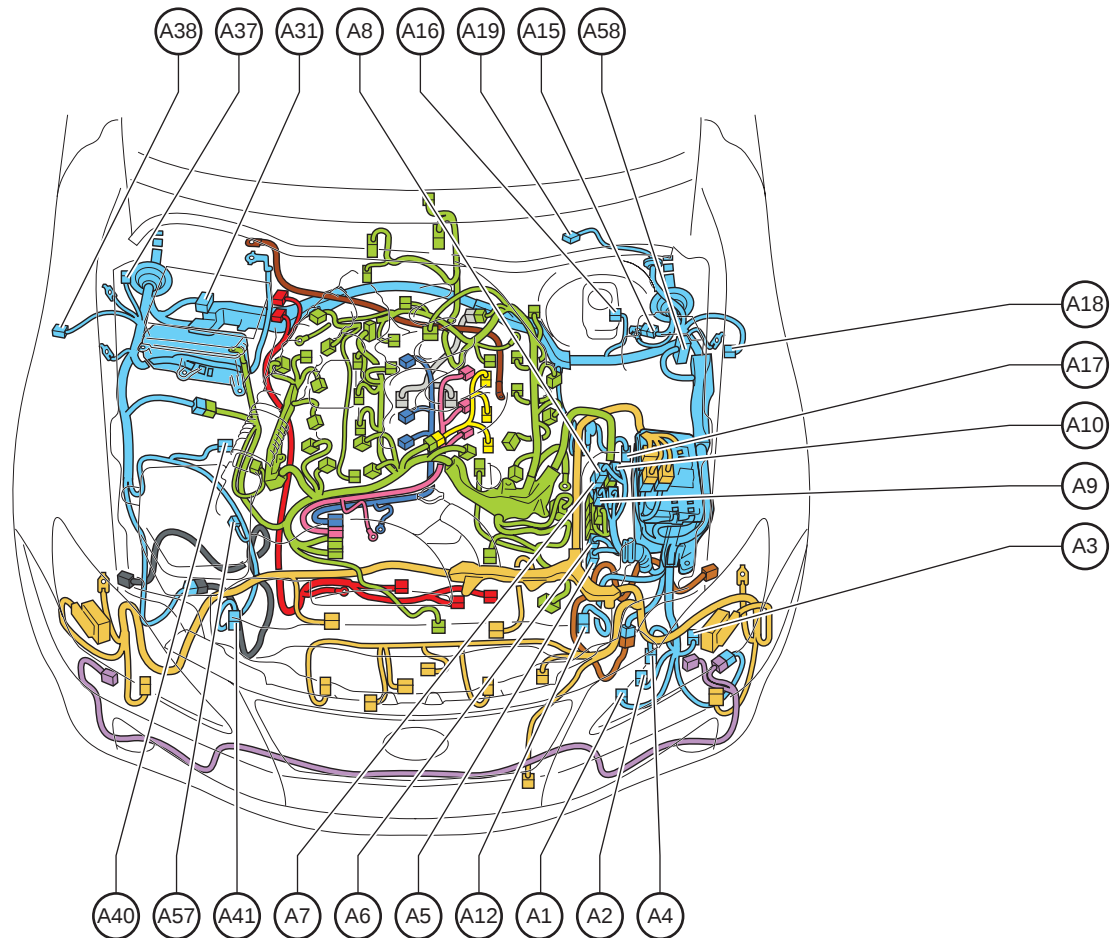


A1 Water Level Warning SW
 A2 Headlamp Cleaner Motor
 A3 Headlamp Cleaner Control Relay
 A4 Windshield Washer Motor
 A5 Engine Control Module
 A6 Engine Control Module
 A7 Junction Connector
 A8 Junction Connector
 A9 Junction Connector
 A10 Junction Connector
 A12 Airbag Sensor (Front LH)
 A15 Junction Connector

A16 Brake Fluid Level Warning SW
 A17 Height Control Sensor (Front)
 A18 Wireless Door Lock Buzzer
 A19 Windshield Wiper Motor
 A31 Power Steering ECU
 A37 Security Horn
 A38 Tire Pressure Warning Antenna (Front RH)
 A40 Fuel Pump Resistor
 A41 Airbag Sensor (Front RH)
 A57 Noise Filter (Ghost Buster)
 A58 Skid Control ECU with Actuator

Position of Parts in Engine Compartment

[2GR-FSE]

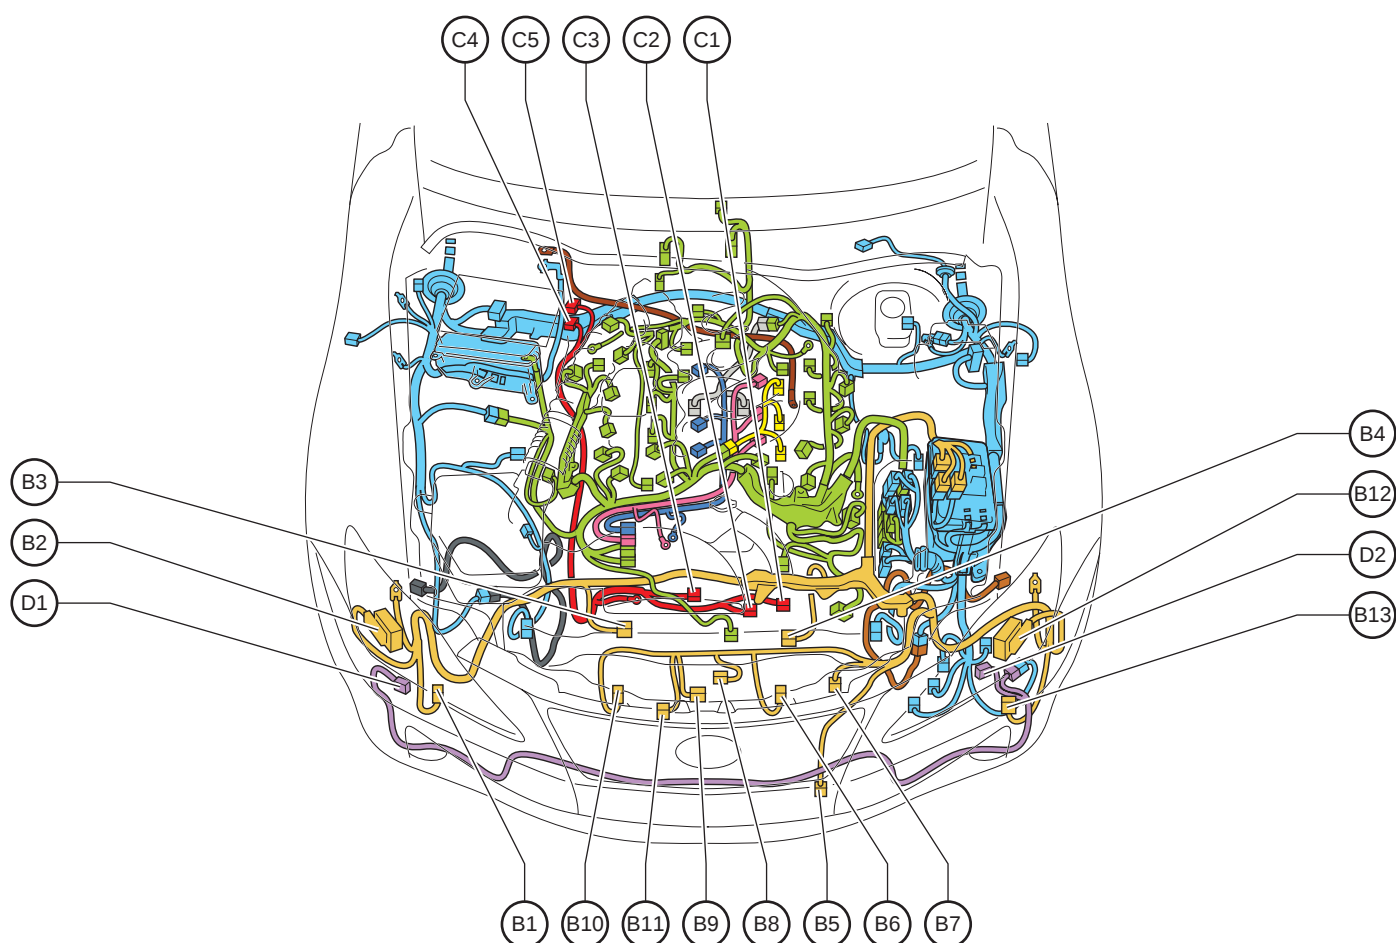


- B1 Fog Lamp (Front RH)
- B2 Headlamp Assembly (RH)
- B3 Cooling Fan Motor (No.2)
- B4 Cooling Fan Motor (No.1)
- B5 Ambient Temp. Sensor
- B6 Horn (Low)
- B7 A/C Pressure Sensor
- B8 Engine Hood Courtesy SW
- B9 Millimeter Wave Radar Sensor
- B10 Horn (High)
- B11 Smog Ventilation Sensor
- B12 Headlamp Assembly (LH)
- B13 Fog Lamp (Front LH)

- C1 Power Steering Torque Sensor
- C2 Power Steering Motor
- C3 Power Steering Motor
- C4 Power Steering ECU
- C5 Power Steering ECU
- D1 Ultrasonic Sensor (Front Corner RH)
- D2 Ultrasonic Sensor (Front Corner LH)

G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment


[2GR-FSE]

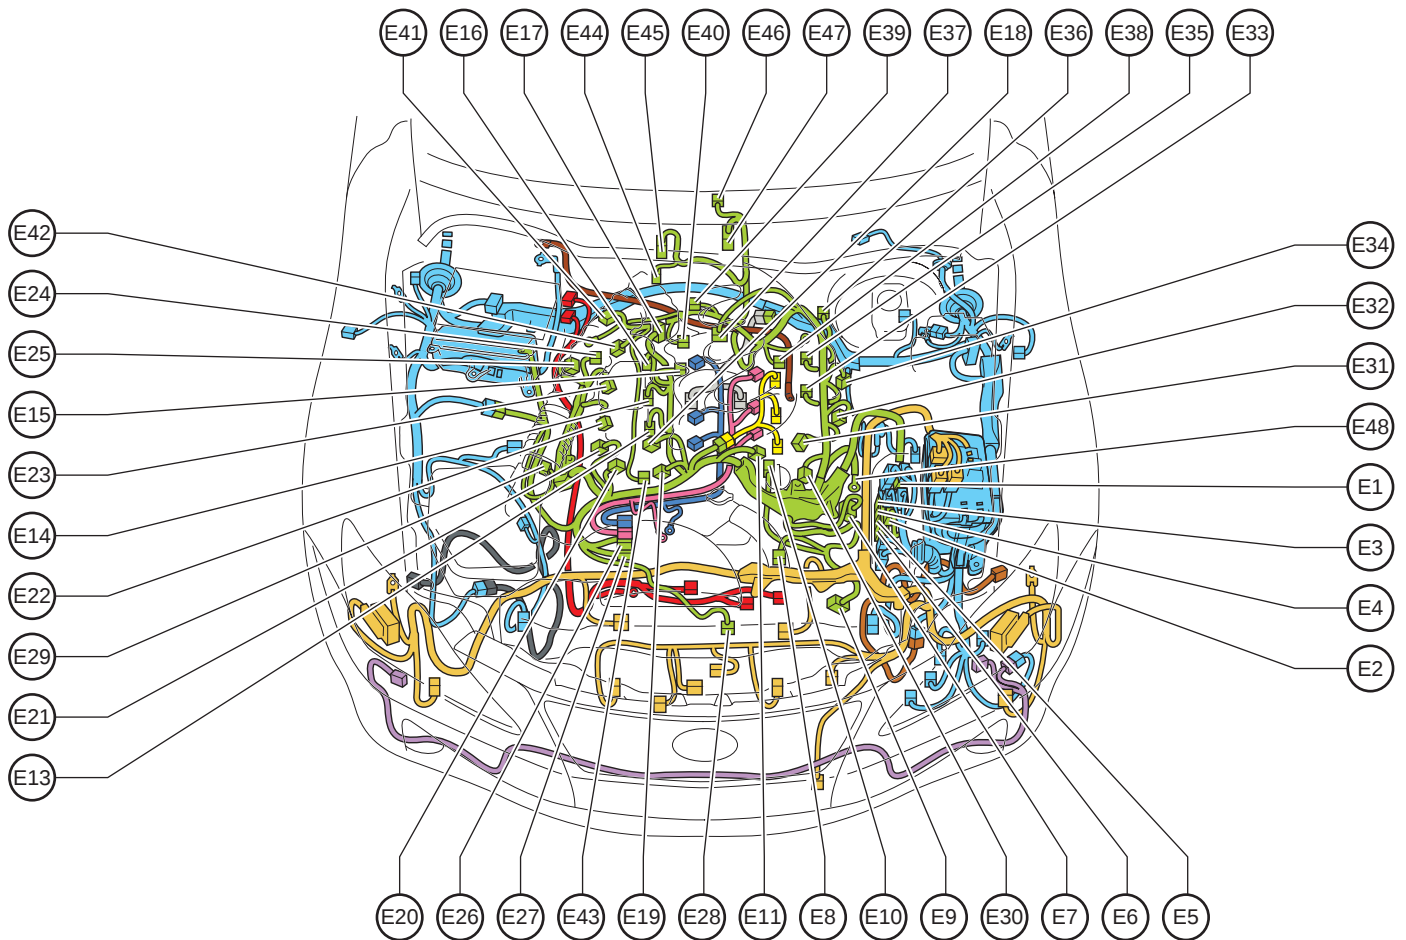

E1	Junction Connector	E26	Injector Driver (EDU)
E2	Junction Connector	E27	Injector Driver (EDU)
E3	Engine Control Module	E28	Engine Oil Pressure SW
E4	Engine Control Module	E29	Mass Air Flow Meter
E5	Engine Control Module	E30	VVT Sensor (Bank 2 Intake Side)
E6	Engine Control Module	E31	Camshaft Timing Oil Control Valve (LH Exhaust Side)
E7	Generator	E32	Ignition Coil (No.2)
E8	A/C Compressor	E33	Ignition Coil (No.4)
E9	Crankshaft Position Sensor	E34	VVT Sensor (Bank 2 Exhaust Side)
E10	Starter	E35	Ignition Coil (No.6)
E11	Camshaft Timing Oil Control Valve (LH Intake Side)	E36	Noise Filter (Ignition LH)
E13	Fuel Injector (for Port Injection No.1)	E37	Fuel Pressure Sensor
E14	Fuel Injector (for Port Injection No.3)	E38	Air Fuel Ratio Sensor (Bank 2 Sensor 1)
E15	VSV (Purge)	E39	Combustion Heater Glow Plug
E16	Fuel Injector (for Port Injection No.5)	E40	Engine Coolant Temp. Sensor
E17	Throttle Body Assembly	E41	Spill Control Valve
E18	Camshaft Timing Oil Control Valve (RH Intake Side)	E42	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
E19	VVT Sensor (Bank 1 Intake Side)	E43	Engine Oil Level Sensor
E20	Noise Filter (Ignition RH)	E44	Transmission Revolution Sensor (Turbine)
E21	Camshaft Timing Oil Control Valve (RH Exhaust Side)	E45	Park/Neutral Position SW
E22	Ignition Coil (No.1)	E46	Transmission Revolution Sensor (Counter Gear)
E23	Ignition Coil (No.3)	E47	Electronically Controlled Transmission Solenoid
E24	Ignition Coil (No.5)	E48	Generator
E25	VVT Sensor (Bank 1 Exhaust Side)		

Position of Parts in Engine Compartment

[2GR-FSE]

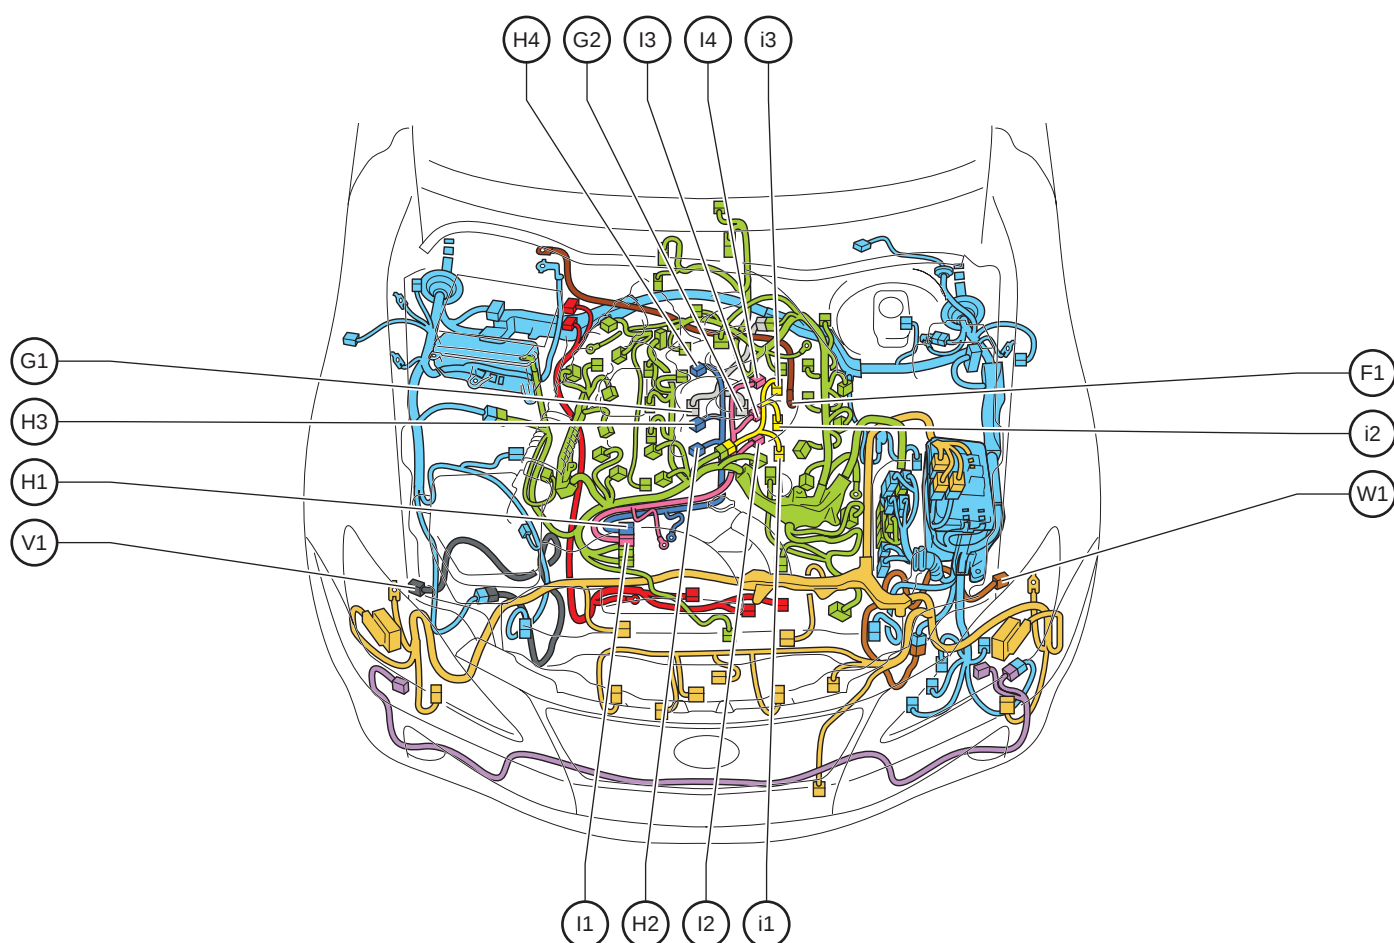

F1 Starter

G1 Knock Control Sensor (Bank 1)

G2 Knock Control Sensor (Bank 2)

H1 Injector Driver (EDU)

H2 Fuel Injector (for Direct Injection No.1)

H3 Fuel Injector (for Direct Injection No.3)

H4 Fuel Injector (for Direct Injection No.5)

I1 Injector Driver (EDU)

I2 Fuel Injector (for Direct Injection No.2)

I3 Fuel Injector (for Direct Injection No.4)

I4 Fuel Injector (for Direct Injection No.6)

V1 Speed Sensor (Front RH)

W1 Speed Sensor (Front LH)

i1 Fuel Injector (for Port Injection No.2)


i2 Fuel Injector (for Port Injection No.4)

i3 Fuel Injector (for Port Injection No.6)

G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[4GR-FSE]

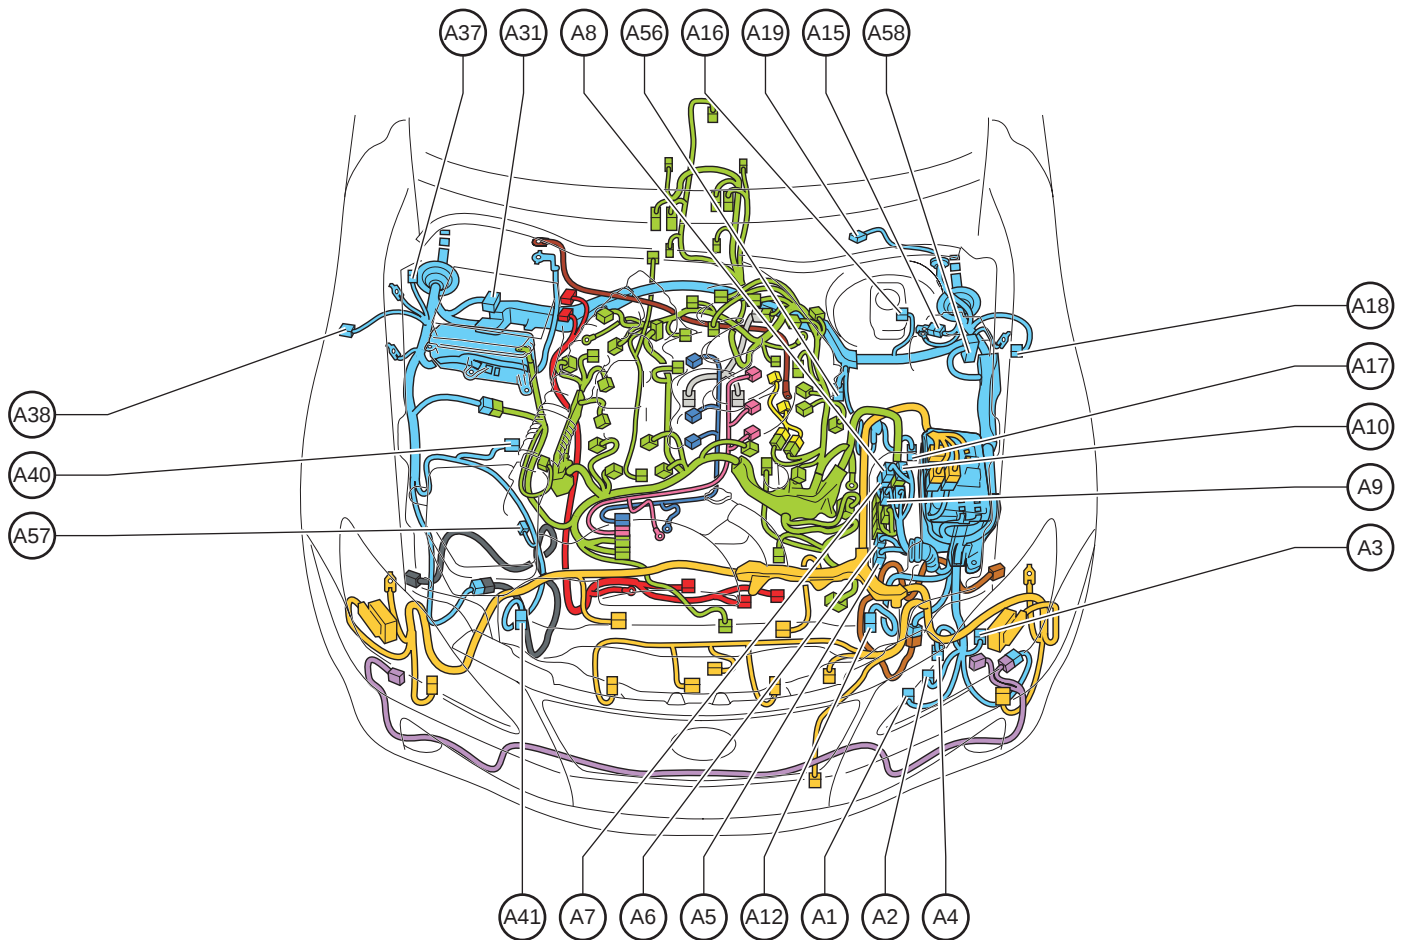


A1	Water Level Warning SW
A2	Headlamp Cleaner Motor
A3	Headlamp Cleaner Control Relay
A4	Windshield Washer Motor
A5	Engine Control Module
A6	Engine Control Module
A7	Junction Connector
A8	Junction Connector
A9	Junction Connector
A10	Junction Connector
A12	Airbag Sensor (Front LH)
A15	Junction Connector

A16	Brake Fluid Level Warning SW
A17	Height Control Sensor (Front)
A18	Wireless Door Lock Buzzer
A19	Windshield Wiper Motor
A31	Power Steering ECU
A37	Security Horn
A38	Tire Pressure Warning Antenna (Front RH)
A40	Fuel Pump Resistor
A41	Airbag Sensor (Front RH)
A56	A/C Pressure Sensor (Low)
A57	Noise Filter (Ghost Buster)
A58	Skid Control ECU with Actuator

Position of Parts in Engine Compartment

[4GR-FSE]

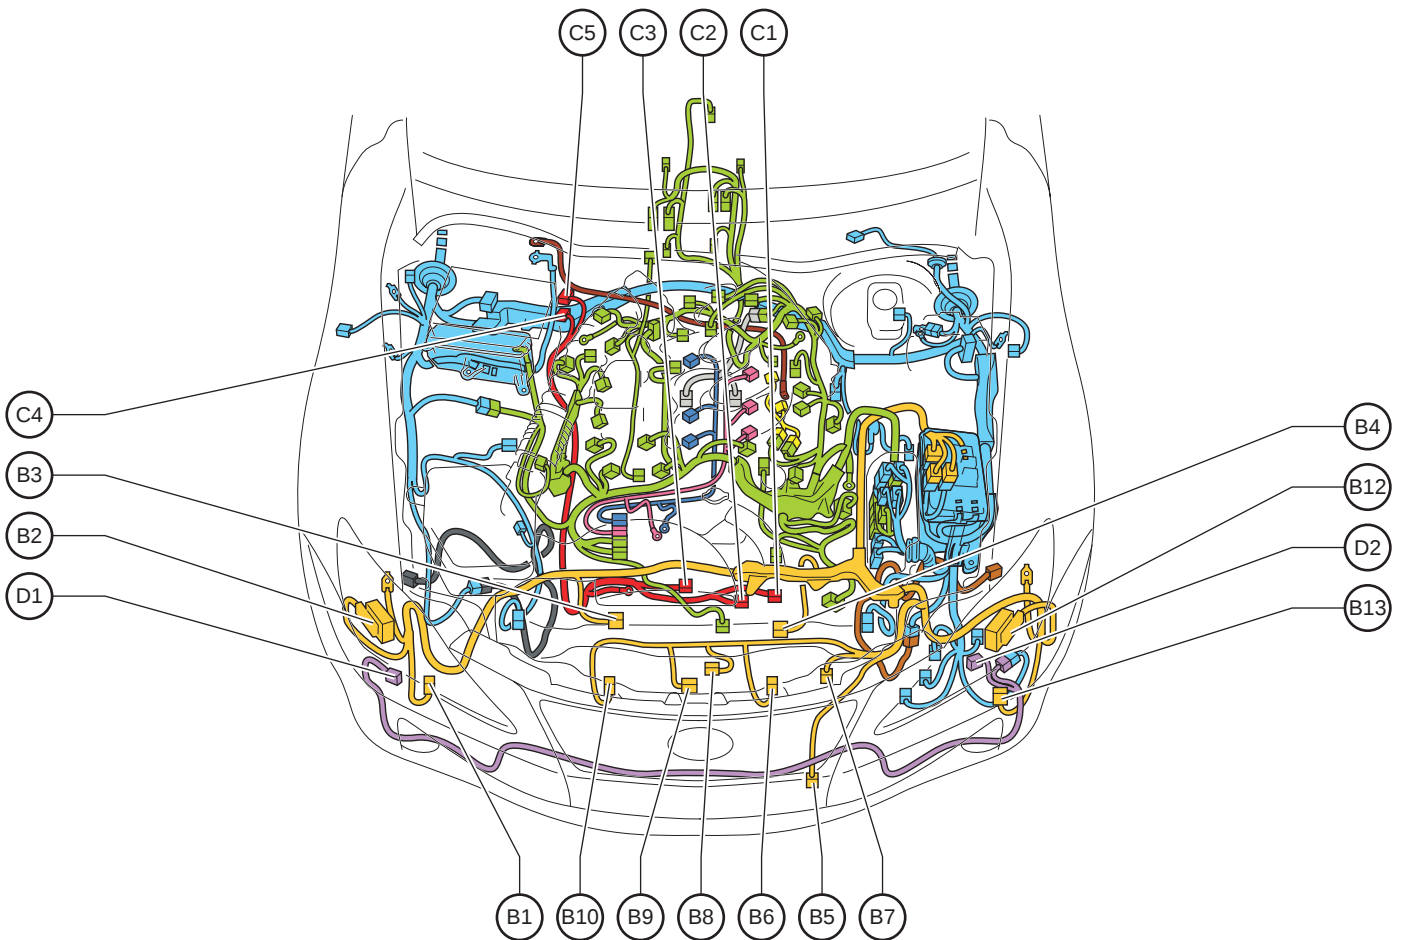


B1	Fog Lamp (Front RH)	C1	Power Steering Torque Sensor
B2	Headlamp Assembly (RH)	C2	Power Steering Motor
B3	Cooling Fan Motor (No.2)	C3	Power Steering Motor
B4	Cooling Fan Motor (No.1)	C4	Power Steering ECU
B5	Ambient Temp. Sensor	C5	Power Steering ECU
B6	Horn (Low)		
B7	A/C Pressure Sensor	D1	Ultrasonic Sensor (Front Corner RH)
B8	Engine Hood Courtesy SW	D2	Ultrasonic Sensor (Front Corner LH)
B9	Millimeter Wave Radar Sensor		
B10	Horn (High)		
B12	Headlamp Assembly (LH)		
B13	Fog Lamp (Front LH)		

G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment


[4GR-FSE]

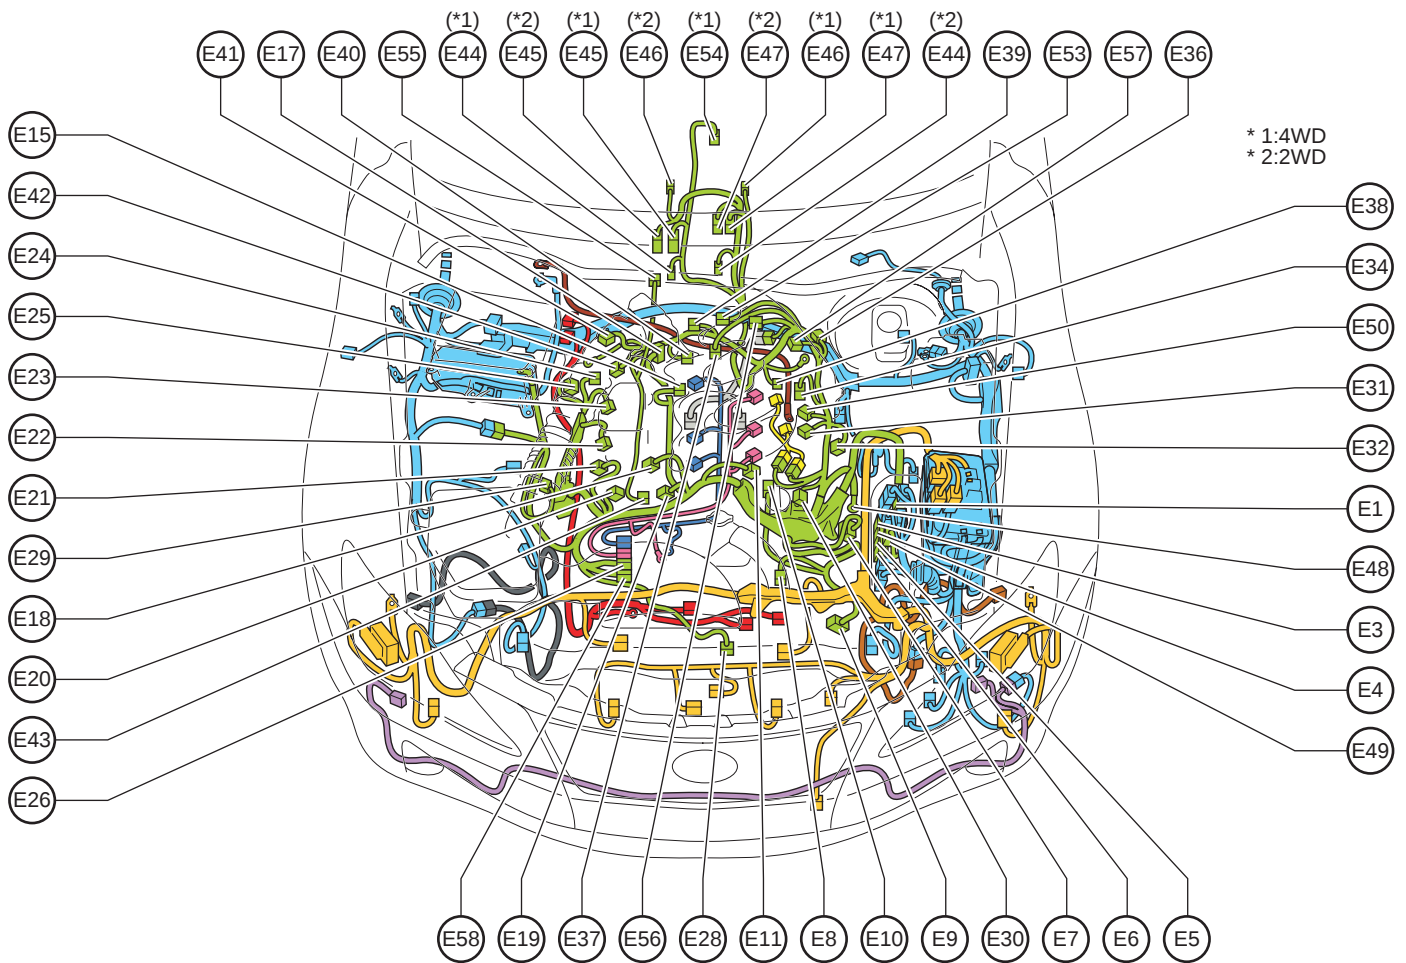

E1	Junction Connector	E31	Camshaft Timing Oil Control Valve (LH Exhaust Side)
E3	Engine Control Module	E32	Ignition Coil (No.2)
E4	Engine Control Module	E34	VVT Sensor (Bank 2 Exhaust Side)
E5	Engine Control Module	E36	Noise Filter (Ignition LH)
E6	Engine Control Module	E37	Fuel Pressure Sensor
E7	Generator	E38	Air Fuel Ratio Sensor (Bank 2 Sensor 1)
E8	A/C Compressor	E39	Combustion Heater Glow Plug
E9	Crankshaft Position Sensor	E40	Engine Coolant Temp. Sensor
E10	Starter	E41	Spill Control Valve
E11	Camshaft Timing Oil Control Valve (LH Intake Side)	E42	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
E15	VSV (Purge)	E43	Engine Oil Level Sensor
E17	Throttle Body Assembly	E44	Transmission Revolution Sensor (Turbine)
E18	Camshaft Timing Oil Control Valve (RH Intake Side)	E45	Park/Neutral Position SW
E19	VVT Sensor (Bank 1 Intake Side)	E46	Transmission Revolution Sensor (Counter Gear)
E20	Noise Filter (Ignition RH)	E47	Electronically Controlled Transmission Solenoid
E21	Camshaft Timing Oil Control Valve (RH Exhaust Side)	E48	Generator
E22	Ignition Coil (No.1)	E49	Junction Connector
E23	Ignition Coil (No.3)	E50	VSV (ACIS)
E24	Ignition Coil (No.5)	E53	Swirl Control Valve Actuator
E25	VVT Sensor (Bank 1 Exhaust Side)	E54	Electronically Controlled Transmission Solenoid
E26	Injector Driver (EDU)	E55	Back-Up Lamp SW
E28	Engine Oil Pressure SW	E56	Swirl Control Valve Sensor
E29	Mass Air Flow Meter	E57	Cold Start Fuel Injector
E30	VVT Sensor (Bank 2 Intake Side)	E58	Injector Driver (EDU)

Position of Parts in Engine Compartment

[4GR-FSE]

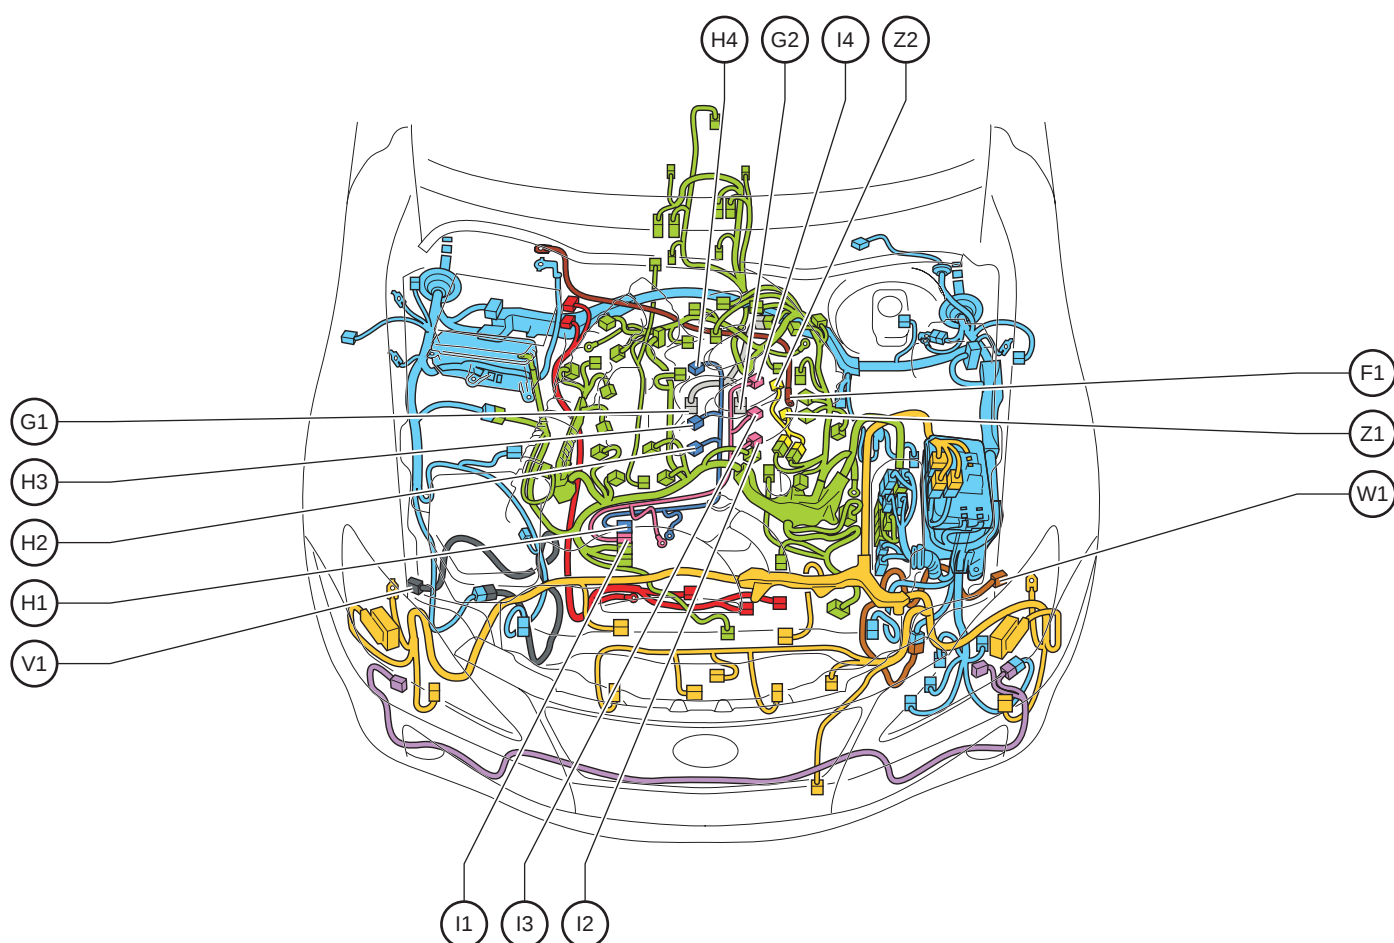

F1 Starter

G1 Knock Control Sensor (Bank 1)

G2 Knock Control Sensor (Bank 2)

H1 Injector Driver (EDU)

H2 Fuel Injector (for Direct Injection No.1)

H3 Fuel Injector (for Direct Injection No.3)

H4 Fuel Injector (for Direct Injection No.5)

I1 Injector Driver (EDU)

I2 Fuel Injector (for Direct Injection No.2)

I3 Fuel Injector (for Direct Injection No.4)

I4 Fuel Injector (for Direct Injection No.6)

V1 Speed Sensor (Front RH)


W1 Speed Sensor (Front LH)

Z1 Ignition Coil (No.4)

Z2 Ignition Coil (No.6)

G ELECTRICAL WIRING ROUTING


Position of Parts in Instrument Panel

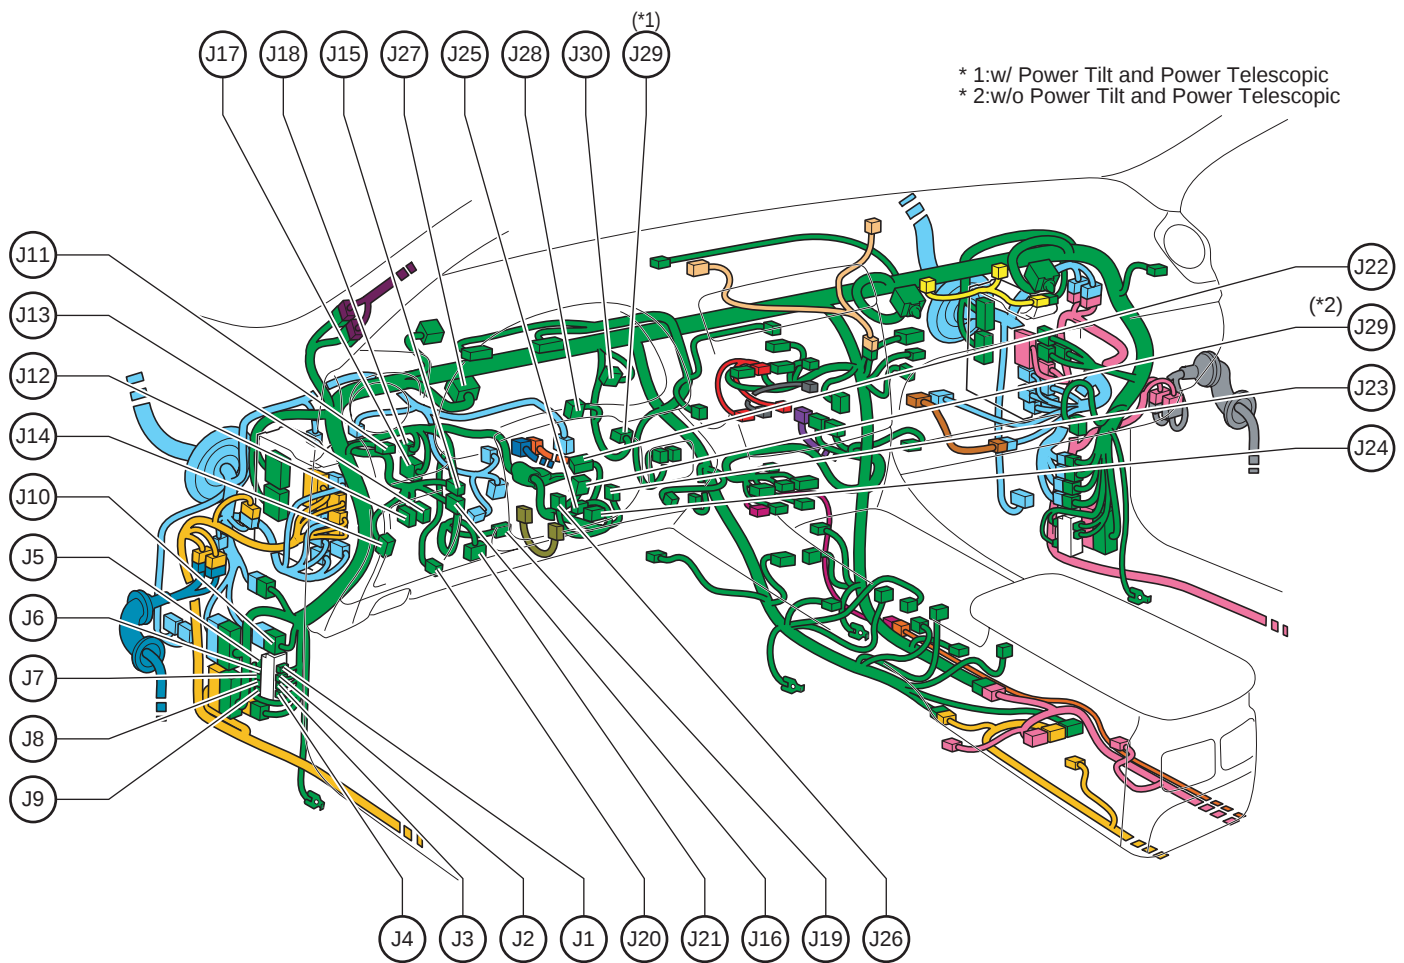

* 1:w/ Power Tilt and Power Telescopic
* 2:w/o Power Tilt and Power Telescopic

J1	Junction Connector	J16	Satellite SW
J2	Junction Connector	J17	Distance Control ECU
J3	Junction Connector	J18	VSC Warning Buzzer
J4	Junction Connector	J19	Foot Lamp (LH)
J5	Junction Connector	J20	Airbag Squib (Driver's Side Knee Airbag)
J6	Junction Connector	J21	Data Link Connector 3
J7	Junction Connector	J22	Tilt Motor
J8	Junction Connector	J23	Steering Sensor
J9	Junction Connector	J24	Spiral Cable
J10	Junction Connector	J25	Airbag Squib (Steering Wheel Pad)
J11	Register Illumination (LH)	J26	Windshield Wiper SW Assembly
J12	Rear Sunshade SW	J27	Junction Connector
J13	Headlamp Cleaner SW	J28	Tilt and Telescopic ECU
J14	Luggage Compartment Door Opener SW	J29	Steering Lock ECU
J15	Light Control Rheostat	J30	Turn Signal Flasher

Position of Parts in Instrument Panel

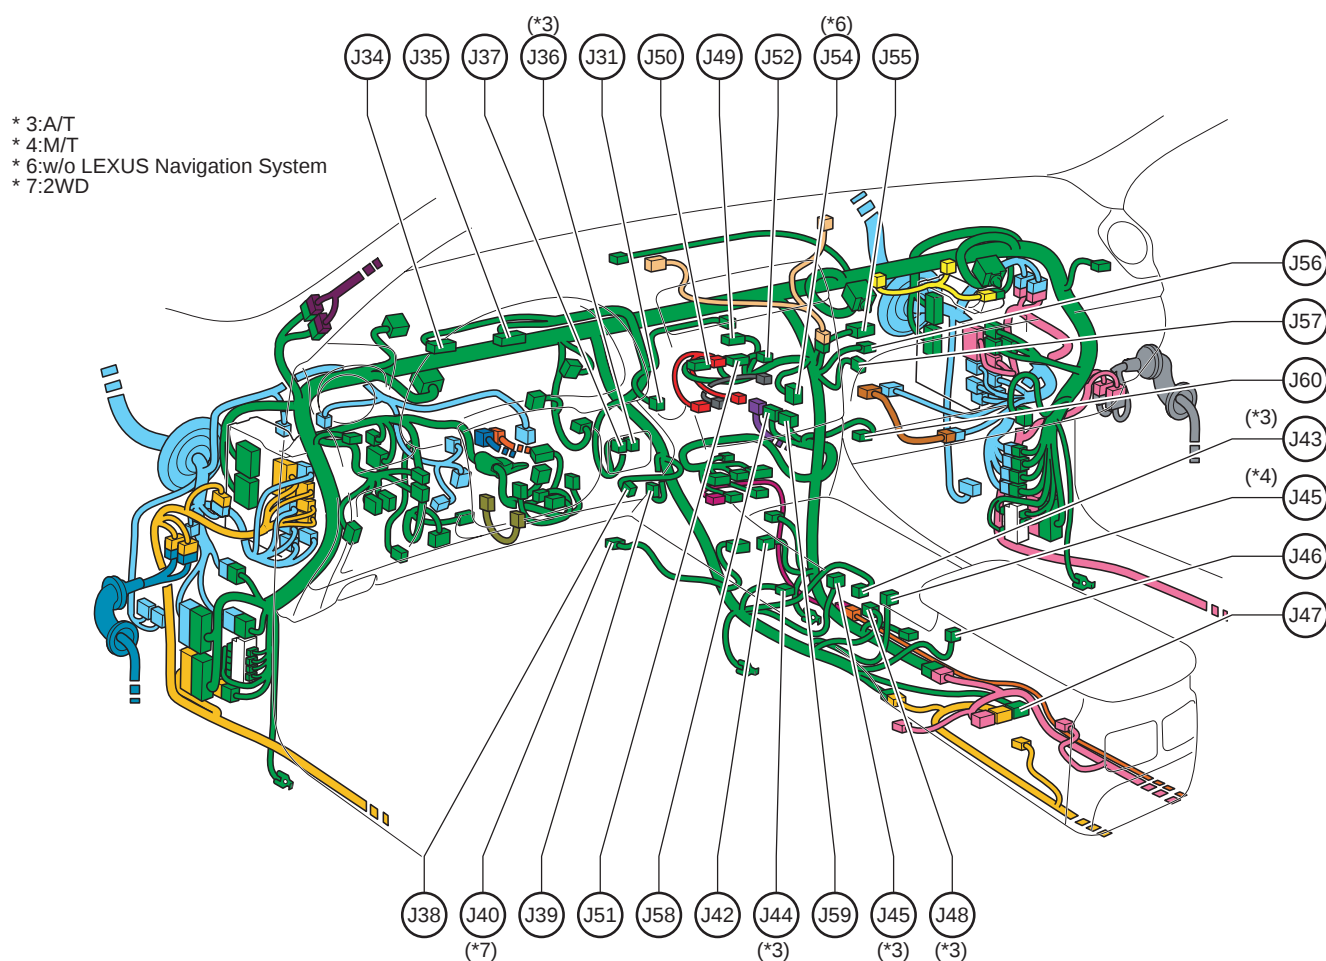


J31 Power SW
 J34 Combination Meter
 J35 Combination Meter
 J36 Electronically Controlled Transmission Pattern Select SW
 J37 Traction Control SW
 J38 A/C Room Temp. Sensor
 J39 Clearance Warning Buzzer
 J40 Heated Oxygen Sensor (Bank 2 Sensor 2)
 J42 Cigarette Lighter
 J43 Transmission Control SW
 J44 A/T Shift Lever Illumination
 J45 Seat Heater SW
 J46 Console Box Lamp

J47 Airbag Sensor Assembly Center
 J48 Shift Lock Control ECU
 J49 Tire Pressure Warning ECU and Receiver
 J50 Multi-Display
 J51 Multi-Display
 J52 Multi-Display
 J54 Integration Control and Panel Assembly
 J55 Power Source Control ECU
 J56 Glove Box Lamp
 J57 Luggage Compartment Door Opener SW (Main)
 J58 A/C Amplifier
 J59 A/C Amplifier
 J60 Foot Lamp (RH)


G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

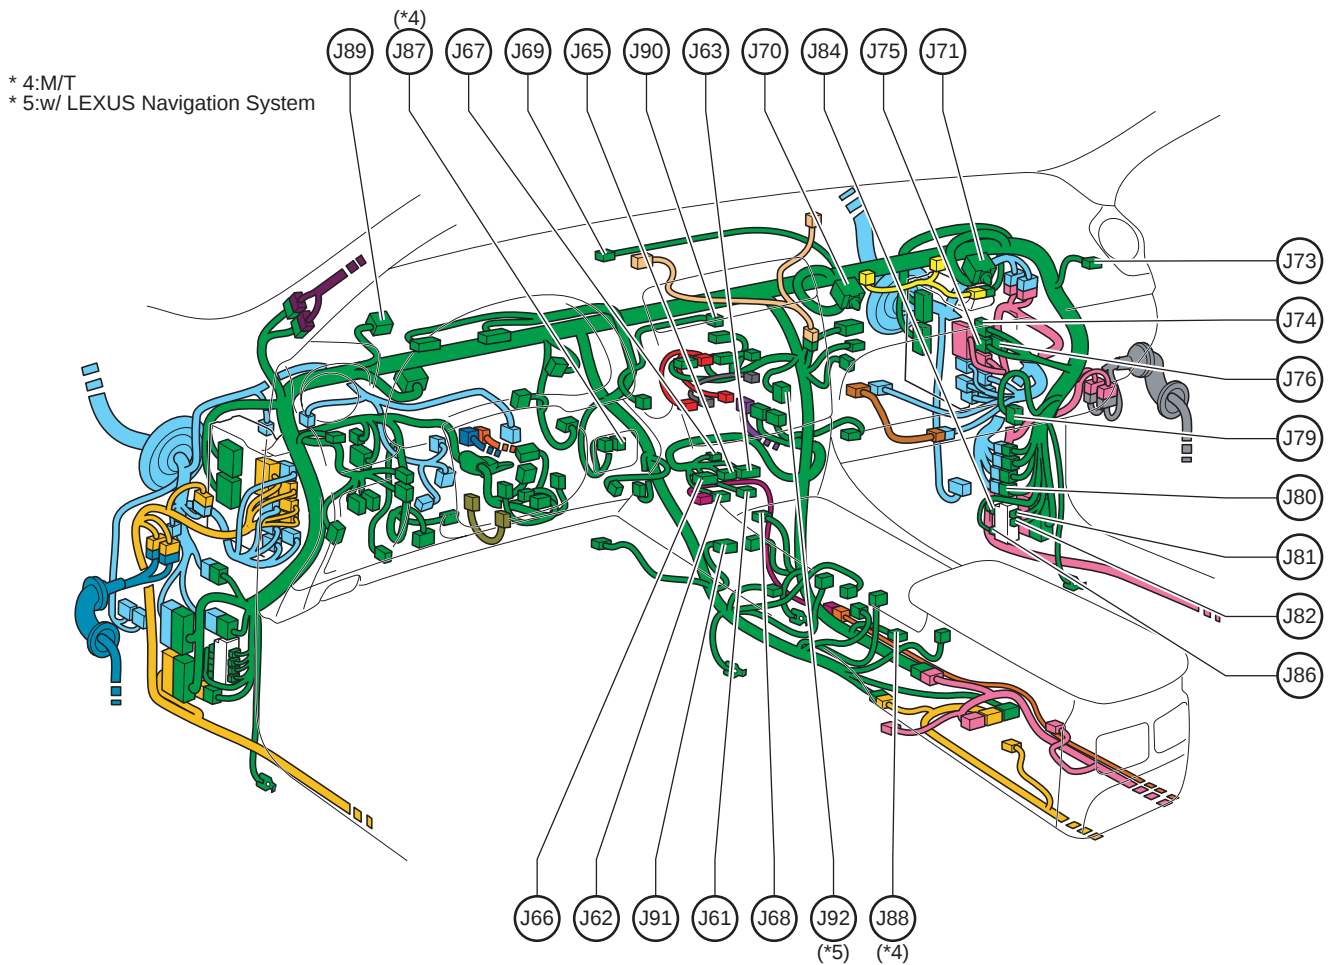

J61	Radio Receiver Assembly	J76	Gateway ECU
J62	Radio Receiver Assembly	J79	Airbag Squib (Front Passenger's Side Knee Airbag)
J63	Radio Receiver Assembly	J80	Junction Connector
J65	Radio Receiver Assembly	J81	Junction Connector
J66	Radio Receiver Assembly	J82	Junction Connector
J67	Antenna Amplifier	J84	Junction Connector
J68	Heated Oxygen Sensor (Bank 1 Sensor 2)	J86	Junction Connector
J69	ID Code Box	J87	ETCS Snow SW
J70	Junction Connector	J88	Parking Brake SW
J71	Junction Connector	J89	Stop Lamp Control Relay
J73	Register Illumination (RH)	J90	Register Illumination (Center)
J74	Body ECU (Cowl Side J/B RH)	J91	Yaw Rate Sensor
J75	Body ECU (Cowl Side J/B RH)	J92	Clock Assembly

Position of Parts in Instrument Panel

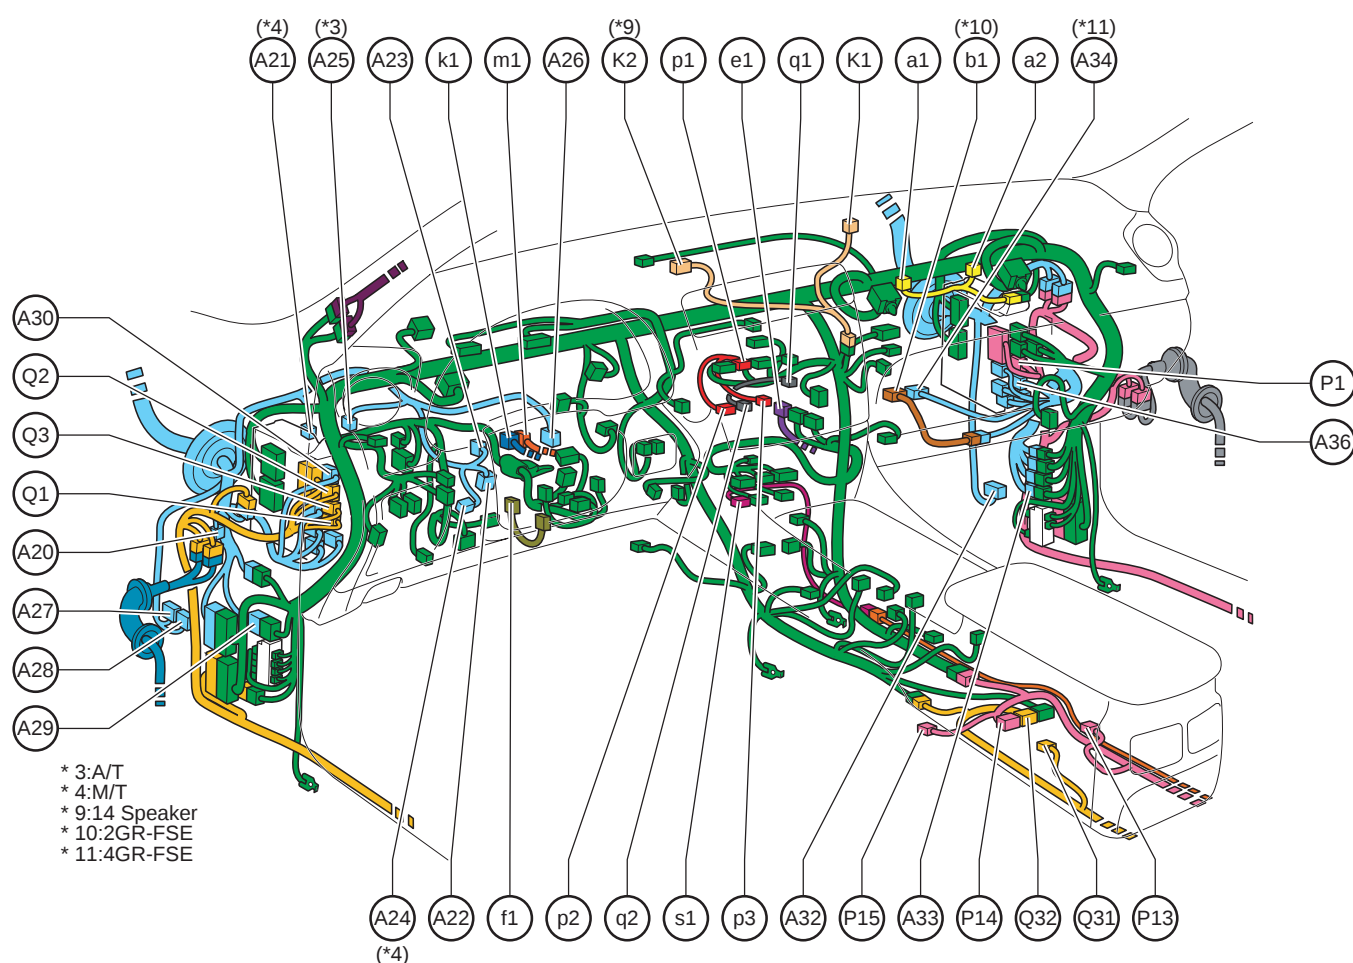


A20	Junction Connector
A21	Cruise Control Clutch SW
A22	Stop Lamp SW
A23	Brake Pedal Load Sensing SW
A24	Clutch Start SW
A25	Parking Brake SW
A26	Accelerator Position Sensor
A27	Headlamp Swivel ECU
A28	Headlamp Swivel ECU
A29	Junction Connector
A30	Body ECU (Cowl Side J/B LH)
A32	4WD Control ECU
A33	Junction Connector
A34	Blower Motor
A36	Body ECU (Cowl Side J/B RH)
K1	Automatic Light Control Sensor
K2	Speaker (Center)
P1	Body ECU (Cowl Side J/B RH)
P13	Power Outlet Socket
P14	Airbag Sensor Assembly Center
P15	Electrical Key Oscillator (Console)

Q1	Body ECU (Cowl Side J/B LH)
Q2	Body ECU (Cowl Side J/B LH)
Q3	Body ECU (Cowl Side J/B LH)
Q31	Stereo Jack Adapter
Q32	Airbag Sensor Assembly Center
a1	Airbag Squib (Front Passenger's Airbag Assembly)
a2	Airbag Squib (Front Passenger's Airbag Assembly)
b1	Blower Motor
e1	A/C Amplifier A/C Blower Assembly
f1	Windshield Wiper SW Assembly Headlamp Dimmer SW Assembly
k1	Spiral Cable Steering Pad SW
m1	Spiral Cable Cruise Control SW
p1	Multi-Display
p2	Multi-Media Module Navigation Assembly
p3	Multi-Media Module Navigation Assembly
q1	Multi-Display
q2	Multi-Media Module Navigation Assembly
s1	Radio Receiver Assembly


G ELECTRICAL WIRING ROUTING

Position of Parts in Body

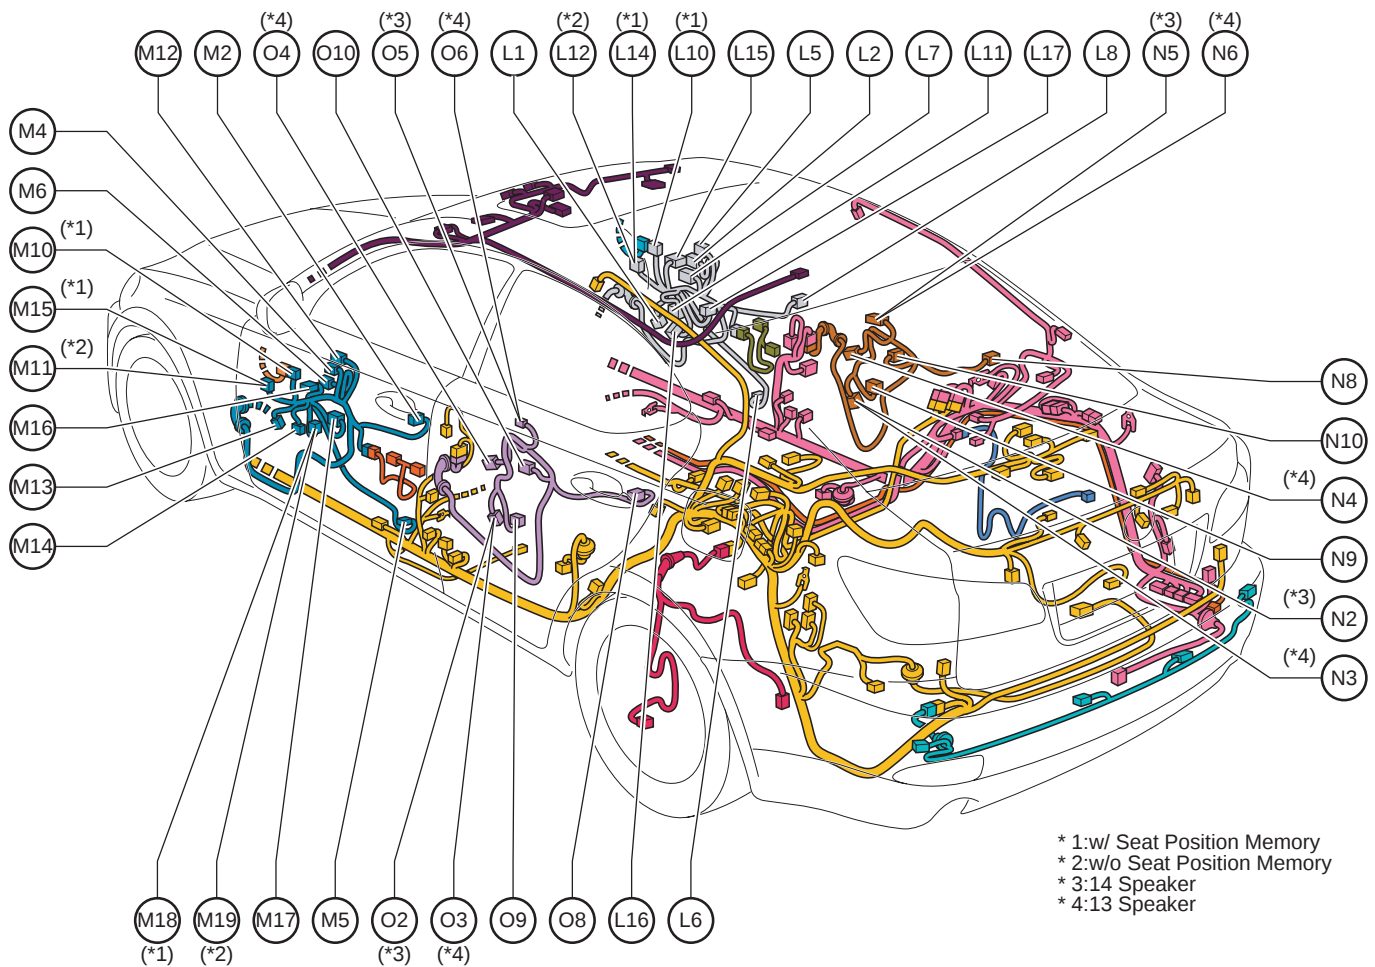

L1	Speaker (Woofer Front Door RH)	M15	Outer Rear View Mirror (LH)
L2	Speaker (Midrange Front Door RH)	M16	Power Window Regulator Motor (Front LH)
L5	Tweeter (Front Door RH)	M17	Power Window Master SW
L6	Courtesy Lamp (Front Door RH)	M18	Outer Mirror SW
L7	Seat Memory SW (RH)	M19	Outer Mirror SW
L8	Door Lock Assembly (Front RH)	N2	Speaker (Midrange Rear Door RH)
L10	Outer Mirror Control ECU (RH)	N3	Speaker (Woofer Rear Door RH)
L11	Junction Connector	N4	Speaker (Midrange Rear Door RH)
L12	Outer Rear View Mirror (RH)	N5	Tweeter (Rear Door RH)
L14	Outer Rear View Mirror (RH)	N6	Tweeter (Rear Door RH)
L15	Power Window Regulator Motor (Front RH)	N8	Door Lock Assembly (Rear RH)
L16	Door Lock Control SW	N9	Power Window SW (Rear RH)
L17	Power Window SW (Front RH)	N10	Power Window Regulator Motor (Rear RH)
M2	Door Lock Assembly (Front LH)	O2	Speaker (Midrange Rear Door LH)
M4	Speaker (Midrange Front Door LH)	O3	Speaker (Woofer Rear Door LH)
M5	Courtesy Lamp (Front Door LH)	O4	Speaker (Midrange Rear Door LH)
M6	Seat Memory SW (LH)	O5	Tweeter (Rear Door LH)
M10	Outer Mirror Control ECU (LH)	O6	Tweeter (Rear Door LH)
M11	Outer Rear View Mirror (LH)	O8	Door Lock Assembly (Rear LH)
M12	Tweeter (Front Door LH)	O9	Power Window SW (Rear LH)
M13	Speaker (Woofer Front Door LH)	O10	Power Window Regulator Motor (Rear LH)
M14	Junction Connector		

Position of Parts in Body

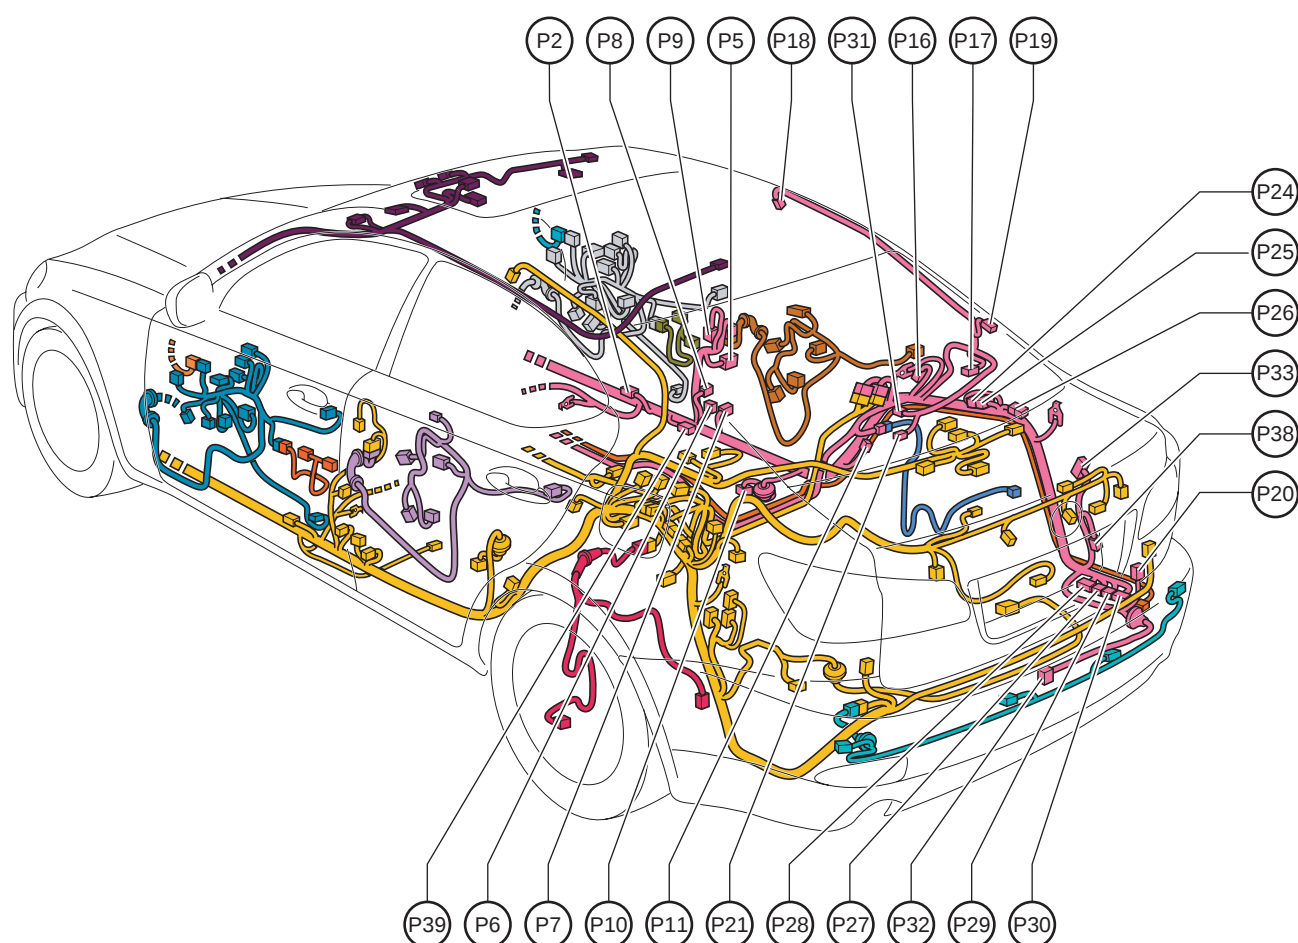


P2 Outer Scuff Lamp (RH)
 P5 Side Airbag Sensor (Front RH)
 P6 Pretensioner (Front RH)
 P7 Front Seat Outer Belt (RH)
 P8 Front Seat Outer Belt Motor (RH)
 P9 Door Courtesy SW (Front RH)
 P10 Fuel Sender Gage (Sub)
 P11 Side Airbag Sensor (Rear RH)
 P16 Door Courtesy SW (Rear RH)
 P17 Pretensioner (Rear RH)
 P18 Curtain Shield Airbag Squib (RH)
 P19 Rear Window Defogger
 P20 Electrical Key Antenna

P21 Speaker (Subwoofer)
 P24 Junction Connector
 P25 Junction Connector
 P26 Junction Connector
 P27 Stereo Component Amplifier
 P28 Stereo Component Amplifier
 P29 Stereo Component Amplifier
 P30 Stereo Component Amplifier
 P31 Door Control Receiver
 P32 Electrical Key Oscillator (Outside Luggage Room)
 P33 Certification ECU
 P38 Option Connector
 (Satellite Digital Audio Radio Service)
 P39 Seat Belt Tension Sensor

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

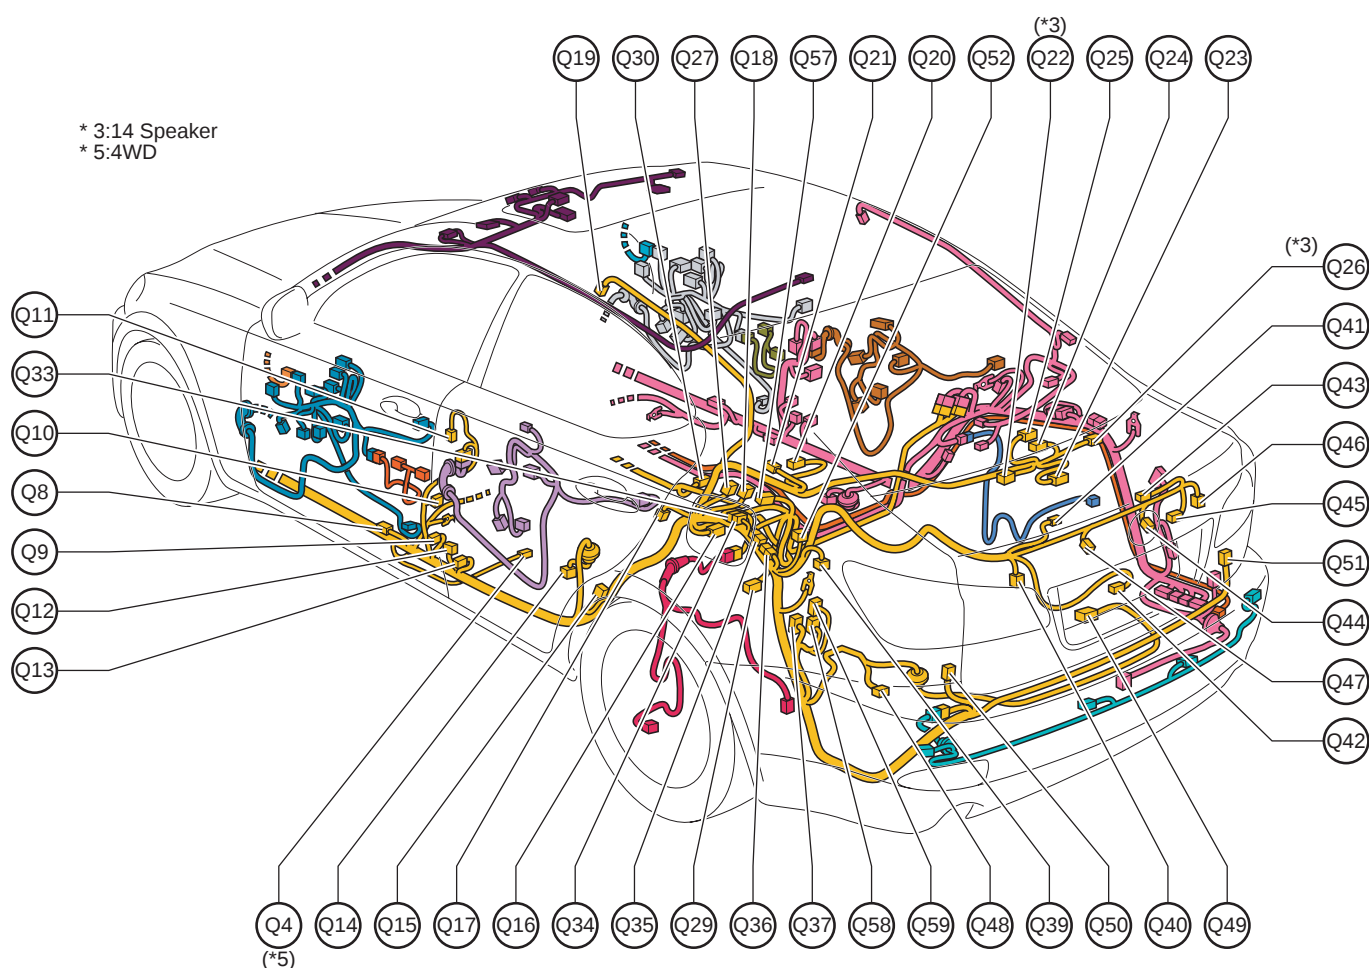


* 3:14 Speaker
* 5:4WD

Q4 Heated Oxygen Sensor (Bank 2 Sensor 2)
Q8 Outer Scuff Lamp (LH)
Q9 Front Seat Outer Belt (LH)
Q10 Side Airbag Sensor (Front LH)
Q11 Door Courtesy SW (Front LH)
Q12 Pretensioner (Front LH)
Q13 Front Seat Outer Belt Motor (LH)
Q14 Fuel Suction Pump and Gage Assembly
Q15 Side Airbag Sensor (Rear LH)
Q16 Diode (Luggage Room Lamp)
Q17 Door Courtesy SW (Rear LH)
Q18 Noise Filter (Stop Lamp)
Q19 Curtain Shield Airbag Squib (LH)
Q20 Pretensioner (Rear LH)
Q21 Rear Window Defogger
Q22 Speaker (Satellite LH)
Q23 Room Lamp (Luggage)
Q24 Rear Sunshade Relay
Q25 Center Stop Lamp
Q26 Speaker (Satellite RH)
Q27 Noise Filter (Luggage Room Lamp)
Q29 Tire Pressure Warning Antenna (Rear LH)
Q30 Electrical Key Oscillator (Rear Seat)

Q33 Junction Connector
Q34 Junction Connector
Q35 Junction Connector
Q36 Junction Connector
Q37 Clearance Warning ECU
Q39 Fuel Lid Opener Motor
Q40 Rear Combination Lamp (LH)
Q41 Luggage Compartment Door Lock Cylinder
Q42 Door Lock Assembly (Luggage)
Q43 Television Camera
Q44 License Plate Lamp (RH)
Q45 Luggage Electrical Key SW
Q46 Rear Combination Lamp (RH)
Q47 License Plate Lamp (LH)
Q48 Electrical Key Oscillator (Inside Luggage Room)
Q49 Canister Pump Module
Q50 Rear Combination Lamp (LH)
Q51 Rear Combination Lamp (RH)
Q52 Mirror Heater Relay
Q57 Junction Connector
Q58 Seat Belt Control ECU
Q59 Seat Belt Control ECU

Position of Parts in Body

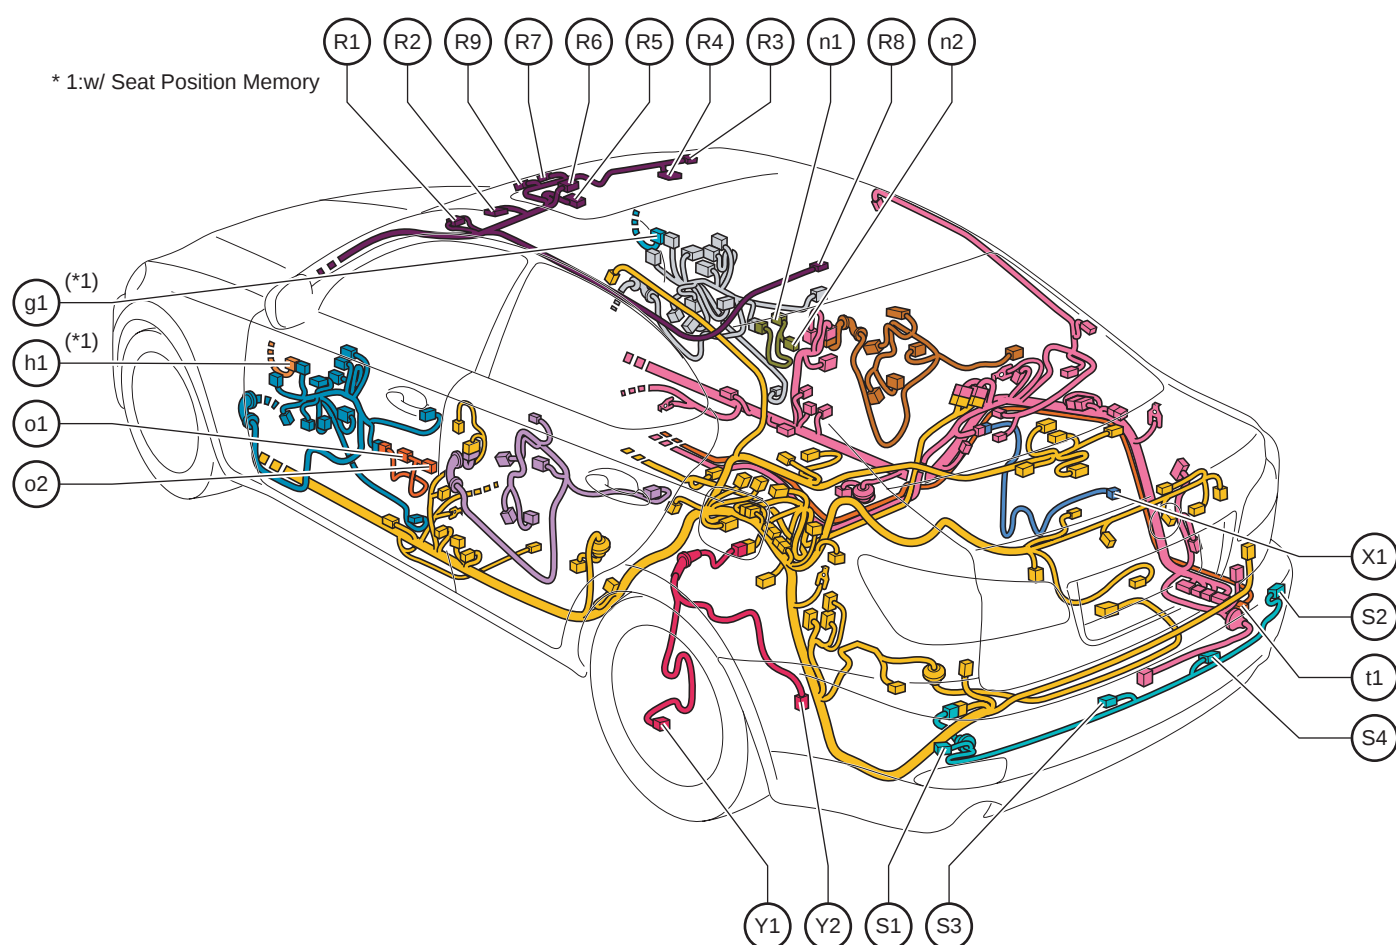

R1 Vanity Lamp SW (LH)
 R2 Vanity Lamp (LH)
 R3 Vanity Lamp SW (RH)
 R4 Vanity Lamp (RH)
 R5 Overhead J/B
 R6 Sliding Roof Control ECU
 R7 Rain Sensor
 R8 Room Lamp
 R9 Inner Rear View Mirror

S1 Ultrasonic Sensor (Rear Corner LH)
 S2 Ultrasonic Sensor (Rear Corner RH)
 S3 Ultrasonic Sensor (Rear Center LH)
 S4 Ultrasonic Sensor (Rear Center RH)

X1 Speed Sensor (Rear RH)

Y1 Speed Sensor (Rear LH)
 Y2 Height Control Sensor (Rear)

g1 Outer Mirror Control ECU (RH)
 Outer Rear View Mirror (RH)

h1 Outer Mirror Control ECU (LH)
 Outer Rear View Mirror (LH)


n1 Door Outside Handle (Front RH)
 n2 Electrical Key Oscillator (Front Door RH)

o1 Door Outside Handle (Front LH)
 o2 Electrical Key Oscillator (Front Door LH)

t1 Stereo Component Amplifier

G ELECTRICAL WIRING ROUTING

Position of Parts in Seat

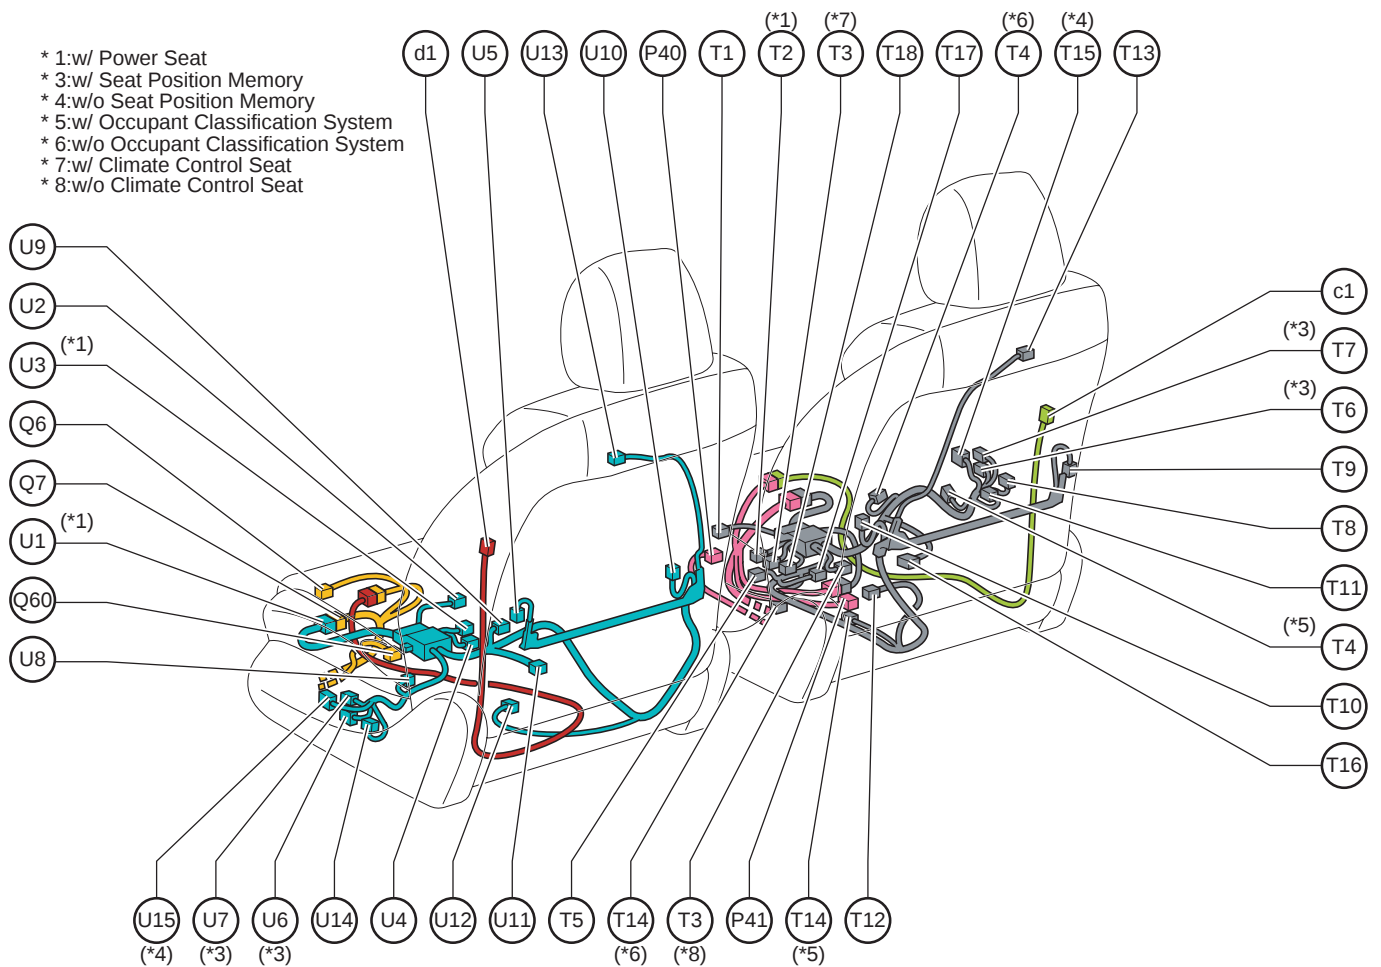

P40 Front Seat Inner Belt Assembly RH
 P41 Front Seat Inner Belt Assembly RH

Q6 Front Seat Inner Belt (LH)
 Q7 Junction Connector
 Q60 Front Seat Inner Belt Assembly RH

T1 Power Seat Motor (Front RH Seat Slide Control)
 T2 Seat Heater (RH)
 T3 Front Seat Inner Belt (RH)
 T4 Power Seat Motor
 (Front RH Seat Front Vertical Control)
 T5 Power Seat Motor
 (Front RH Seat Rear Vertical Control)
 T6 Position Control ECU and SW (Front RH Seat)
 T7 Position Control ECU and SW (Front RH Seat)
 T8 Power Seat SW
 (Front RH Seat Lumbar Support Control)
 T9 Power Seat Motor (Front RH Seat Reclining Control)
 T10 Power Seat Motor
 (Front RH Seat Lumbar Support Control)
 T11 Junction Connector
 T12 Seat Climate Control Blower (Front RH Seat Cushion)
 T13 Seat Climate Control Blower (Front RH Seat Back)
 T14 Junction Connector
 T15 Power Seat SW (Front RH Seat)

T16 Occupant Classification ECU
 T17 Occupant Classification Sensor
 T18 Front Seat Inner Belt (RH)


U1 Junction Connector
 U2 Power Seat Motor (Front LH Seat Slide Control)
 U3 Seat Heater (LH)
 U4 Front Seat Inner Belt (LH)
 U5 Power Seat Motor (Front LH Seat Reclining Control)
 U6 Position Control ECU and SW (Front LH Seat)
 U7 Position Control ECU and SW (Front LH Seat)
 U8 Power Seat Motor
 (Front LH Seat Front Vertical Control)
 U9 Power Seat Motor
 (Front LH Seat Rear Vertical Control)
 U10 Power Seat Motor
 (Front LH Seat Lumbar Support Control)
 U11 Junction Connector
 U12 Seat Climate Control Blower (Front LH Seat Cushion)
 U13 Seat Climate Control Blower (Front LH Seat Back)
 U14 Power Seat SW
 (Front LH Seat Lumbar Support Control)
 U15 Power Seat SW (Front LH Seat)

c1 Side Airbag Squib (Front RH)
 d1 Side Airbag Squib (Front LH)


G ELECTRICAL WIRING ROUTING

 : Location of Connector Joining Wire Harness and Wire Harness

[2GR-FSE]

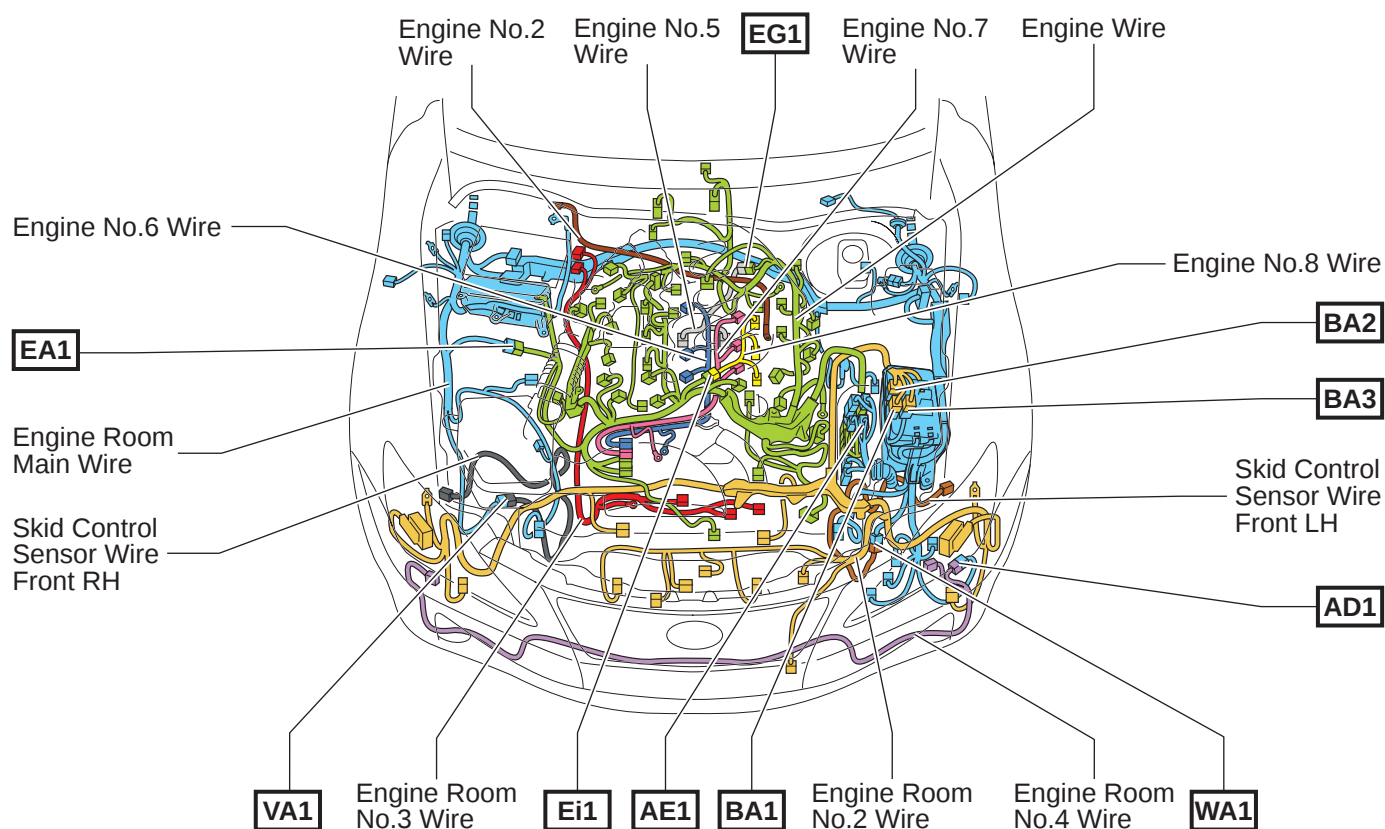


 : Location of Ground Points

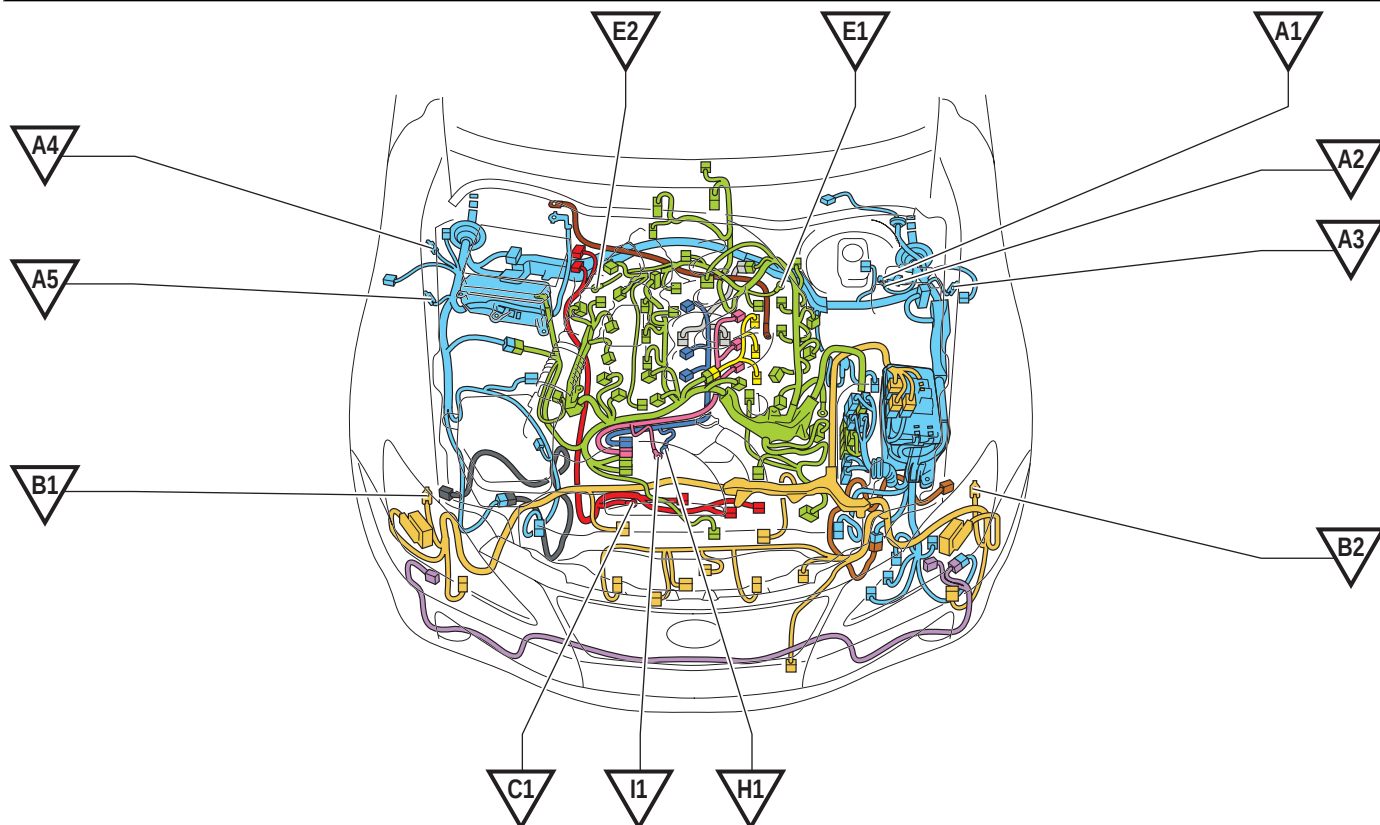


 : Location of Connector Joining Wire Harness and Wire Harness

[4GR-FSE]

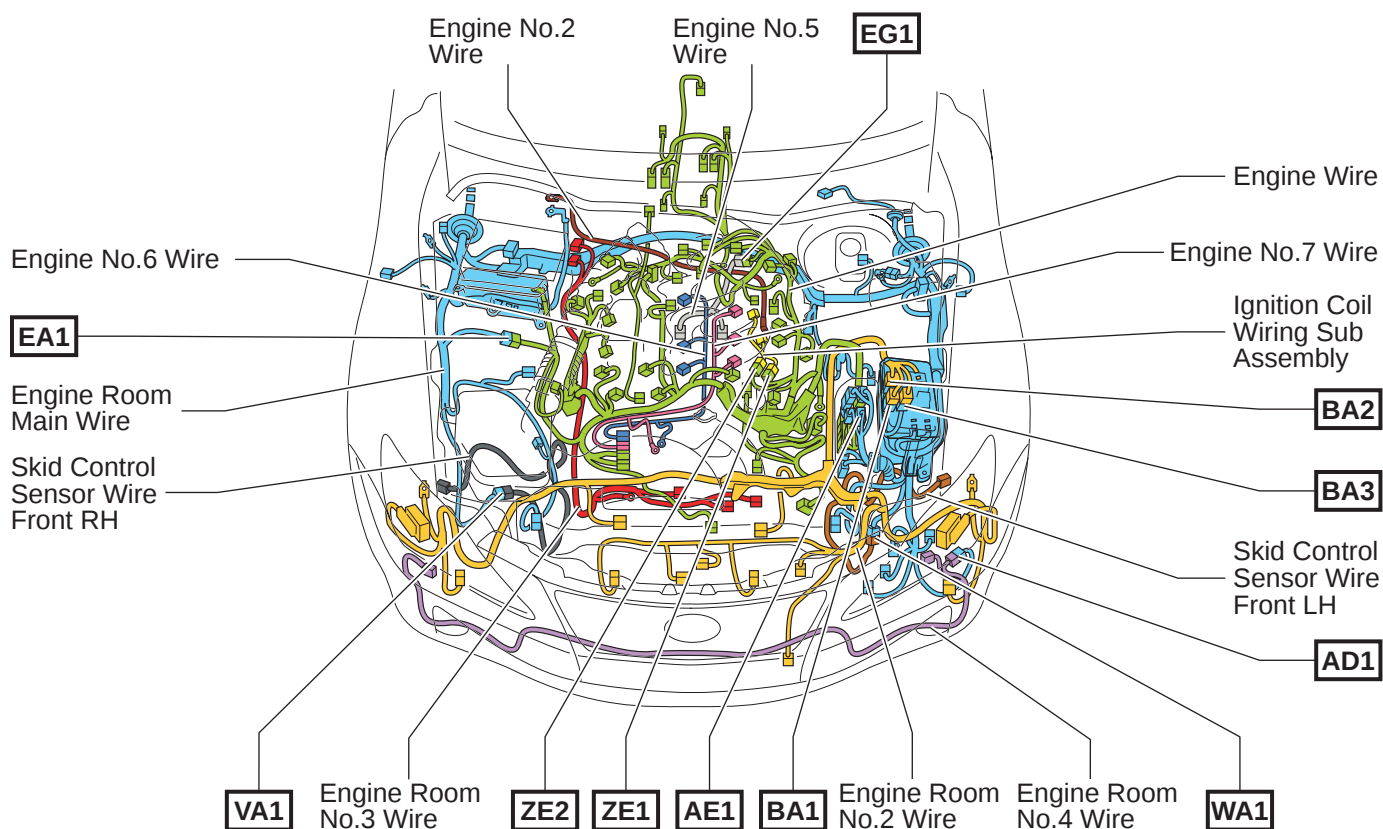


 : Location of Ground Points

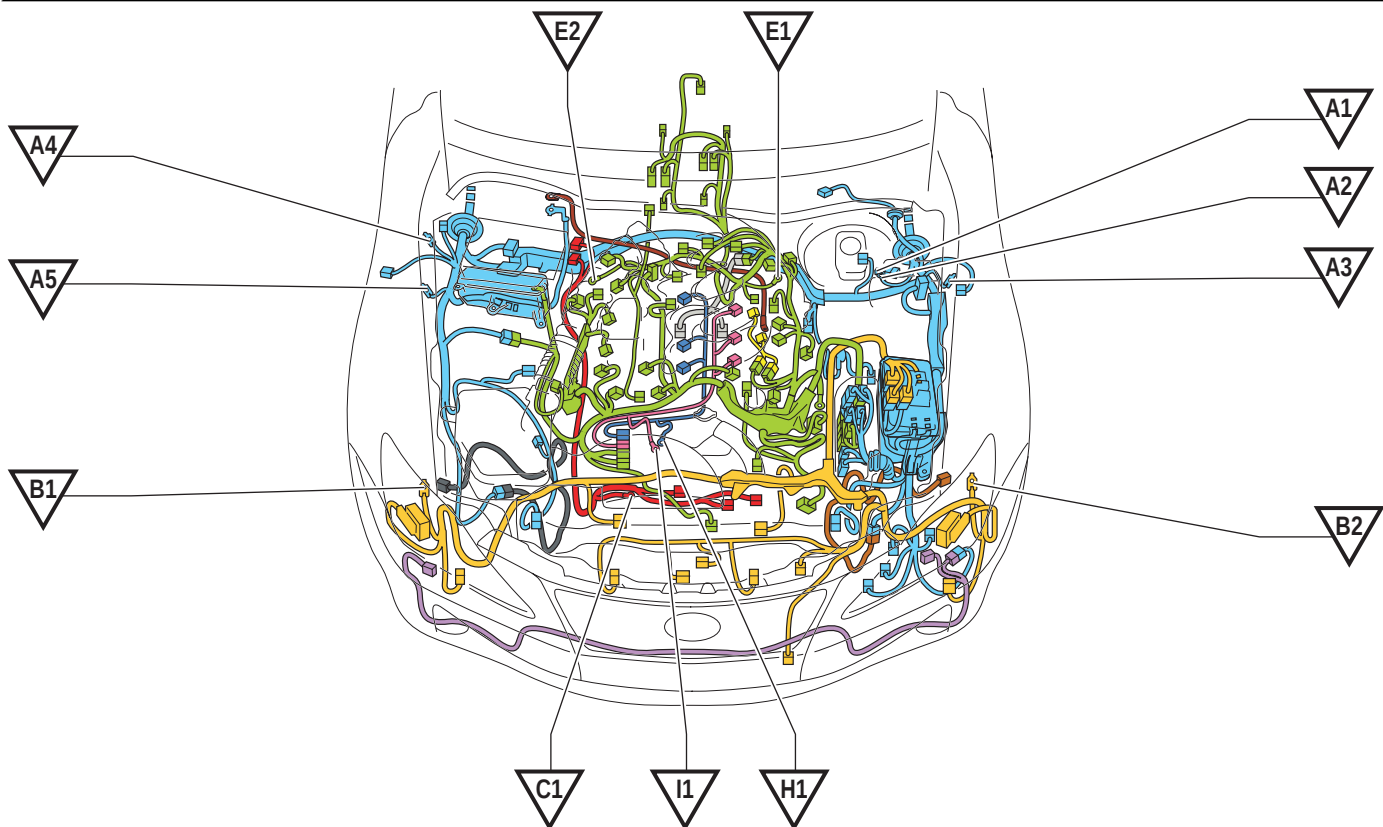


G ELECTRICAL WIRING ROUTING

 : Location of Connector Joining Wire Harness and Wire Harness

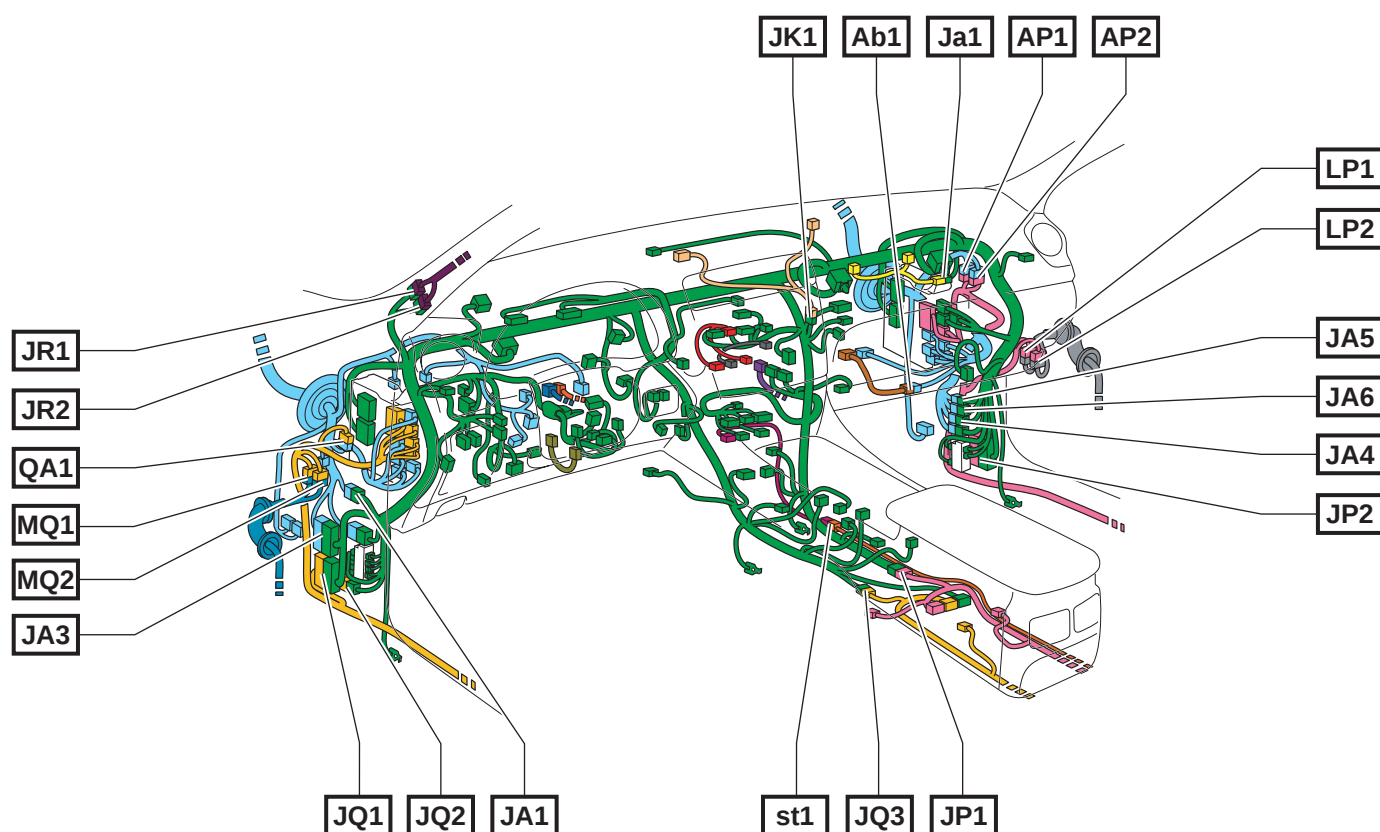


 : Location of Ground Points

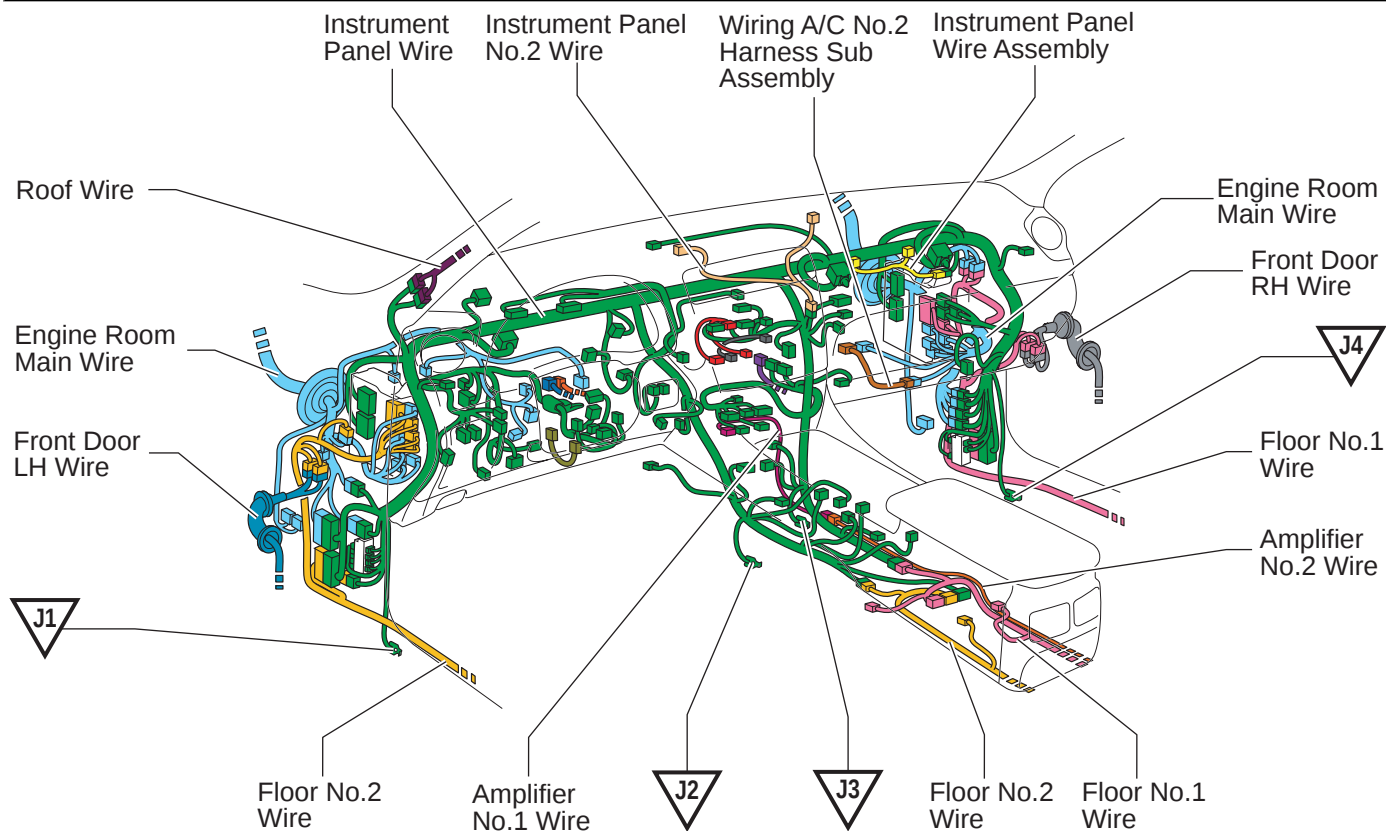


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

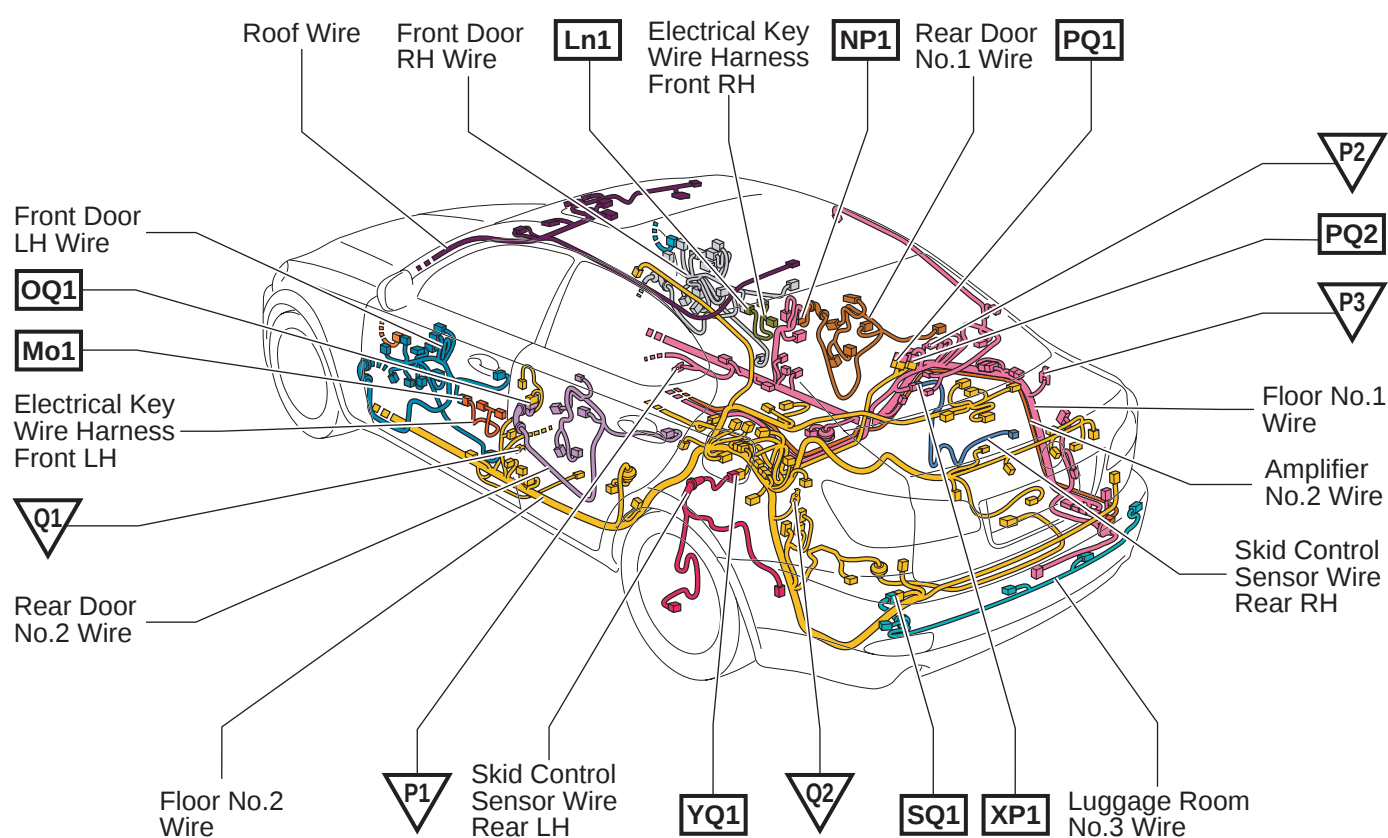


G ELECTRICAL WIRING ROUTING

 : Location of Connector Joining Wire Harness and Wire Harness

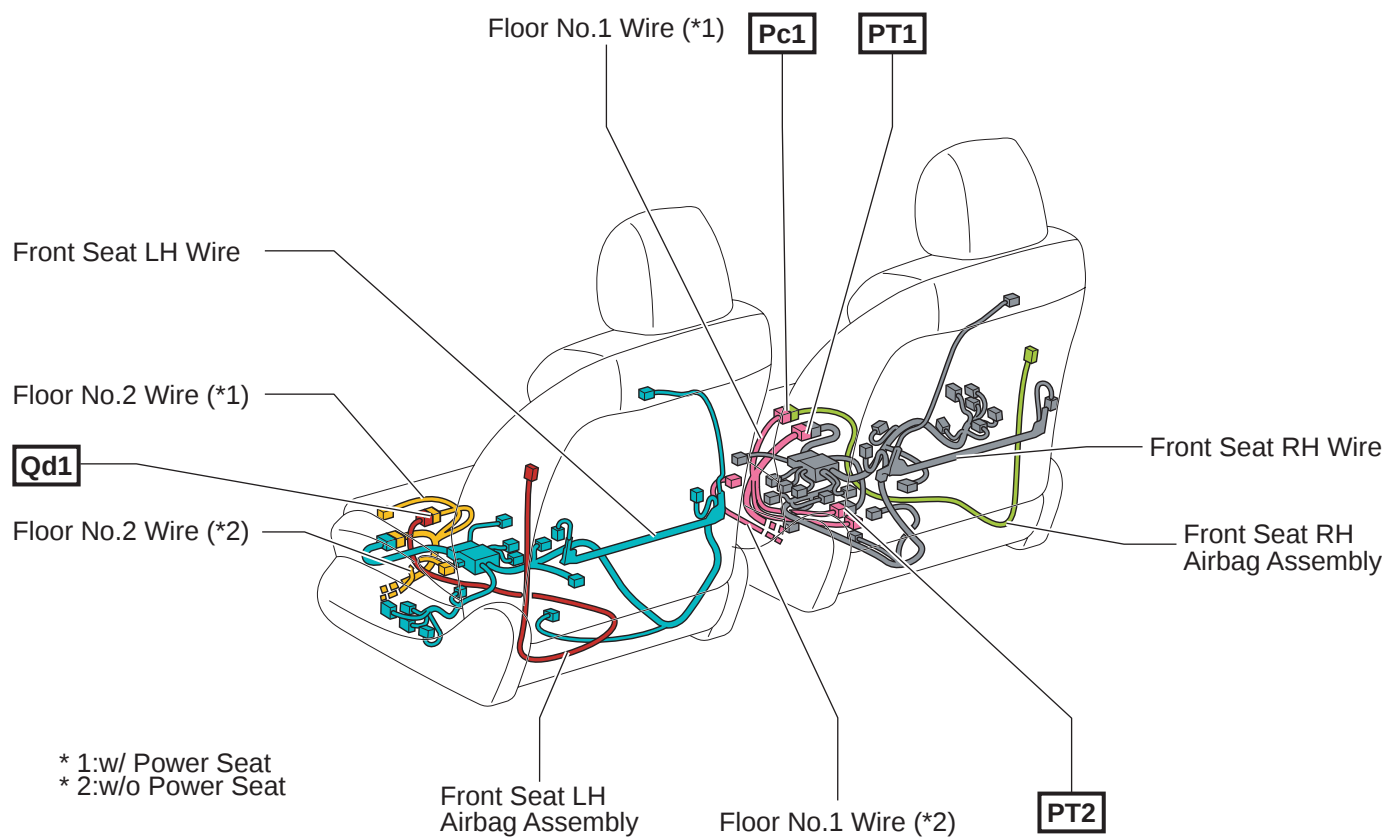

[Antenna]

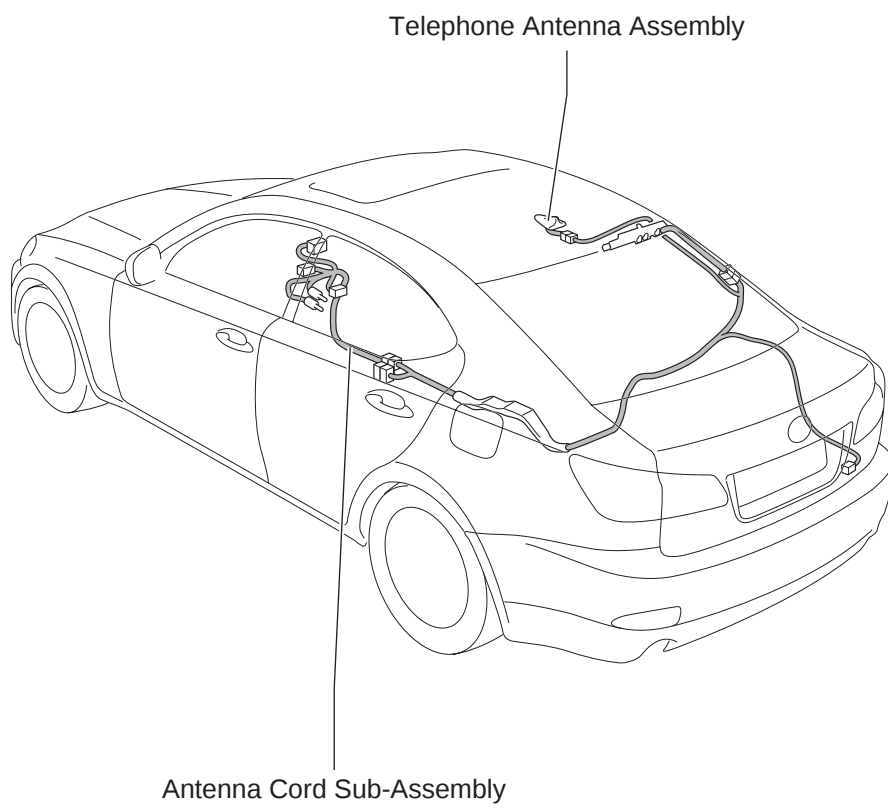

2009 IS 350 / IS 250

ELECTRICAL WIRING DIAGRAM

SYSTEM CIRCUITS

	Page
4WD	388
Adaptive Front-Lighting System	238
Air Conditioning	546
Audio System	520
Automatic Glare-Resistant EC Mirror and Compass	484
Automatic Light Control	226
Back-Up Light	218
Charging	110
Cigarette Lighter	488
Climate Control Seat	474
Clock	510
Combination Meter	534
Cooling Fan	542
Cruise Control (2GR-FSE)	356
Cruise Control (4GR-FSE)	368
Data Link Connector 3	154
Door Lock Control	268
Dynamic Radar Cruise Control (2GR-FSE)	320
Dynamic Radar Cruise Control (4GR-FSE)	338
Electric Tension Reducer	444
Electronically Controlled Transmission and A/T Indicator (2GR-FSE)	296
Electronically Controlled Transmission and A/T Indicator (4GR-FSE)	308
Engine Control (2GR-FSE)	114
Engine Control (4GR-FSE)	134
EPS	392
Front Fog Light	220
Front Wiper and Washer	252
Fuel Lid Opener	438
Garage Door Opener	486
Headlight	168
Headlight Cleaner	248
Horn	492
Ignition (2GR-FSE)	102
Ignition (4GR-FSE)	106
Illumination	196
Interior Light	176
LEXUS Navigation System	520
Light Auto Turn Off System	232
Luggage Compartment Door Opener	440
Mirror Heater	506
Multiplex Communication System (AVC-LAN)	166
Multiplex Communication System (BEAN)	158