




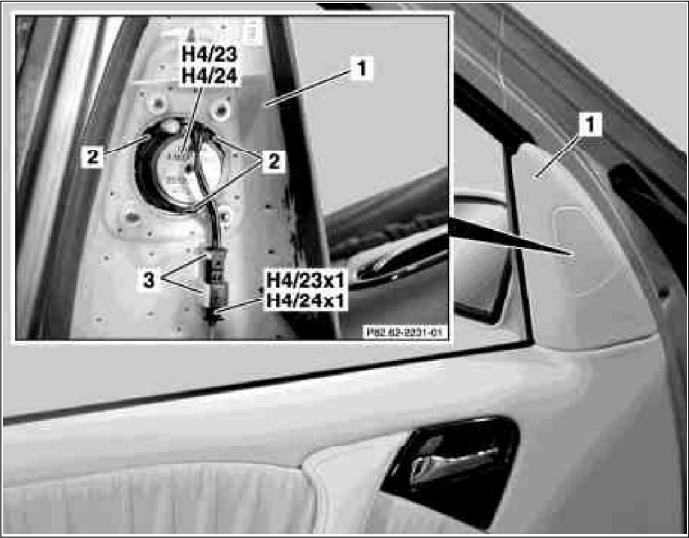

MODELS 163.113 #A as of 289565,
163.113 #X as of 754620,
163.154 /174 #A as of 289565,
163.128 /157 /175


- 1Mirror triangle
- 2Retaining clamps
- 3Bracket

- H4/23Left front door speaker, mirror triangle
- H4/23x1Left front door speaker connector, mirror triangle
- H4/24Right front door speaker, mirror triangle
- H4/24x1Right front door speaker connector, mirror triangle



P82.62-2232-11

|   | Remove/install | | |
|---|---|---|---------------|
| 1 | Unclip mirror triangle (1) from door |  Assembly wedge | *110589035900 |
| 2 | Disconnect left front door speaker connector, mirror triangle (H4/23x1) or right front door speaker connector, mirror triangle (H4/24x1) from left front door speaker, mirror triangle (H4/23) or right front door speaker, mirror triangle (H4/24) | | |
| 3 | Remove retaining clips (2) | | |
| 4 | Remove speaker from mirror triangle |  Disconnect plug from bracket (3). | |
| 5 | Install in the reverse order | | |

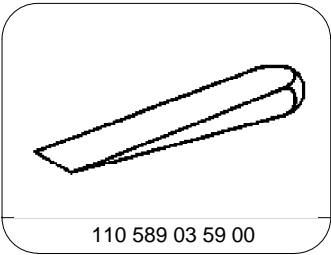

110 589 03 59 00

Assembly wedge