

SERVICE MANUAL

DAIHATSU

TYPE M5S Series

Manual Transmission

FOREWORD

This service manual describes the disassembling, check and assembling procedures for the unit of the FR (Front engine – Rear drive), 5-speed, manual transmission itself. For the installation and removal procedure for the transmission onto or from the vehicle or the check procedure for the control system, refer to the relevant chassis service manual for the vehicle concerned.

All information used in this service manual was in effect at the time when the manual was printed. However, the specifications and procedures may be revised owing to continuing improvements in the design without advance notice and without incurring any obligation to us.

Published in September, 2000



DAIHATSU MOTOR CO., LTD.

NO.9233

©2000 DAIHATSU MOTOR CO., LTD.

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Daihatsu Motor Co., Ltd.