

INTRODUCTION

HOW TO USE THIS MANUAL	
GENERAL INFORMATION	IN-1
VEHICLE IDENTIFICATION NUMBER, ENGINE SERIAL NUMBER AND TRANSMISSION SERIAL NUMBER	
LOCATION.....	IN-4
VEHICLE OPERATION AND PRECAUTION	
PRECAUTIONS	IN-5
SUPPORT POSITIONS FOR JACK, RIGID RACK AND LIFT	IN-17
HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS	
NEW DIAGNOSTIC SYSTEM	IN-24
DESCRIPTION OF BASIC DIAGNOSTIC PROCEDURES.....	IN-26
CUSTOMER PROBLEM ANALYSIS	IN-28
CONFIRMING SYMPTOMS AND CHECKING DIAGNOSTIC TROUBLE CODES	IN-30
REPRODUCTION METHOD OF PROBLEM SYMPTOM	IN-33
DIAGNOSTIC TROUBLE CODE CHART	IN-34
PROBLEM SYMPTOMS TABLE	IN-35
DTC SYSTEM-SPECIFIC INSPECTION PROCEDURE	IN-36
ELECTRONIC CIRCUIT INSPECTION PROCEDURE	IN-38
TERMS	
ABBREVIATIONS	IN-44

