

OPERATION SETTING WHEN DISCONNECTING AND RECONNECTING NEGATIVE BATTERY TERMINAL

SERVICE

Work item	Work procedure	Non-compliant Behavior, Non-working Functions	Remarks
Initialization of power window system	<ol style="list-style-type: none"> 1. Disconnect the negative (-) terminal of the battery or the connector to the power window master switch. 2. After 5 seconds or more has elapsed, connect the negative (-) terminal of the battery or the connector to the power window master switch. 3. Fully open the window of the driver seat door. 4. Make the window of the driver seat door go up and continue to keep the switch in the UP direction for at least 2 seconds even after the window is fully closed. 	<ul style="list-style-type: none"> • Automatic opening and closing function of the door window • Jam protection function • Remote operation of each seat with the driver seat switch 	Settings are required for the driver seat master switch

SS

