


ENGINE CONTROL COMPUTER (3SZ-VE)

COMPONENTS

ES

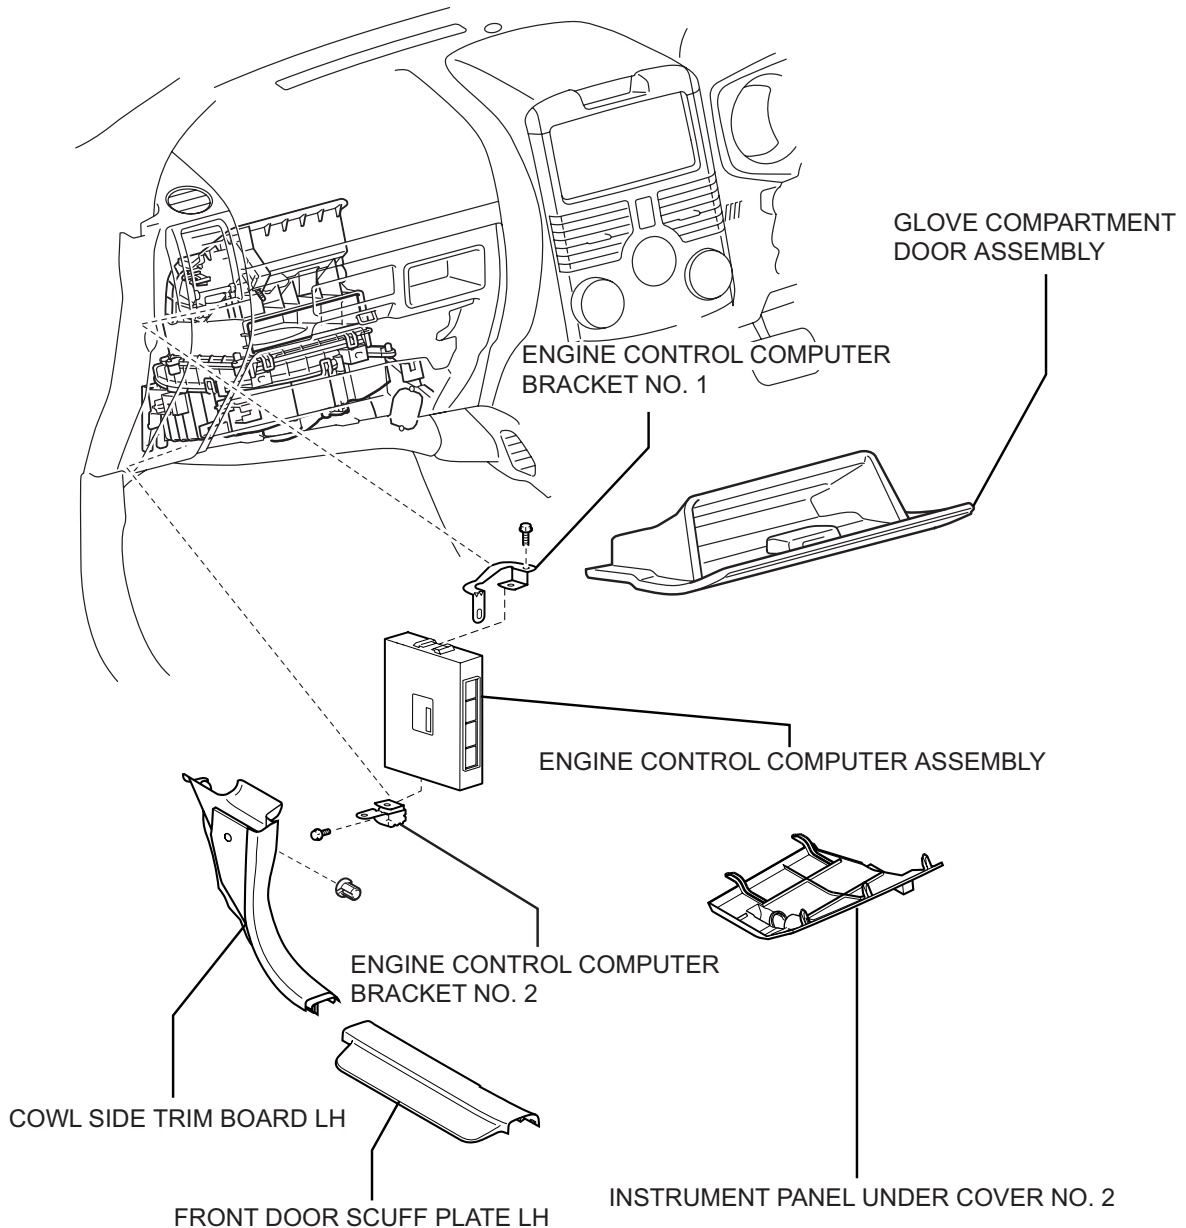

REMOVAL

1. **DISCONNECT NEGATIVE BATTERY TERMINAL**
(See page RS-164.)
2. **REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY (See page IP-11)**
3. **INSTALL INSTRUMENT PANEL UNDER COVER NO.2 (See page IP-12)**
4. **REMOVE FRONT DOOR SCUFF PLATE LH**
5. **REMOVE COWL SIDE TRIM BOARD LH**
6. **REMOVE ENGINE CONTROL COMPUTER**
 - (a) Remove each connector.
 - (b) Remove the 2 bolts and the engine control computer.

NOTICE:
Be careful not to drop the engine control computer.
7. **REMOVE ENGINE CONTROL COMPUTER BRACKET NO.1**
 - (a) Disengage the claw and remove engine control computer bracket No.1 from the engine control computer.
8. **REMOVE ENGINE CONTROL COMPUTER BRACKET NO.2**
 - (a) Disengage the claw and remove engine control computer bracket No.2 from the engine control computer.

ES

INSTALLATION

1. **INSTALL ENGINE CONTROL COMPUTER BRACKET NO.2**
 - (a) Install engine control computer bracket No.2 to the engine control computer.
2. **INSTALL ENGINE CONTROL COMPUTER BRACKET NO.1**
 - (a) Install engine control computer bracket No.1 to the engine control computer
3. **INSTALL ENGINE CONTROL COMPUTER**
 - (a) Install the engine control computer with the 2 bolts.
 - (b) Connect each connector.
4. **INSTALL COWL SIDE TRIM BOARD LH**
5. **INSTALL FRONT DOOR SCUFF PLATE LH**
6. **INSTALL INSTRUMENT PANEL UNDER COVER NO.2 (See page IP-17)**
7. **INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY (See page IP-18)**
8. **CONNECT NEGATIVE BATTERY TERMINAL**
Torque: 5.4 N*m (55 kgf*cm)
9. **PERFORM INITIALIZATION**
(See page SS-10.)

