

ENGINE MECHANICAL

ENGINE MECHANICAL SYSTEM (3SZ-VE)	
OPERATION CHECK	EM-1
ENGINE MECHANICAL SYSTEM (K3-VE)	
OPERATION CHECK	EM-4
FAN AND ALTERNATOR V BELT (3SZ-VE)	
COMPONENTS.....	EM-7
REMOVAL.....	EM-8
INSTALLATION	EM-8
FAN AND ALTERNATOR V BELT (K3-VE)	
COMPONENTS.....	EM-11
REMOVAL.....	EM-12
INSTALLATION	EM-12
VALVE CLEARANCE (3SZ-VE)	
INSPECTION.....	EM-15
ADJUSTMENT	EM-16
VALVE CLEARANCE (K3-VE)	
INSPECTION.....	EM-25
ADJUSTMENT	EM-26
PARTIAL ENGINE ASSEMBLY (3SZ-VE)	
COMPONENTS.....	EM-35
REMOVAL.....	EM-43
INSTALLATION	EM-54
PARTIAL ENGINE ASSEMBLY (K3-VE)	
COMPONENTS.....	EM-70
REMOVAL.....	EM-78
INSTALLATION	EM-89
CHAIN (3SZ-VE)	
COMPONENTS.....	EM-105
REMOVAL.....	EM-108
INSTALLATION	EM-110
CHAIN (K3-VE)	
COMPONENTS.....	EM-113
REMOVAL.....	EM-116
INSTALLATION	EM-118
CAMSHAFT (3SZ-VE)	
COMPONENTS.....	EM-121
REMOVAL.....	EM-123
INSTALLATION	EM-127
CAMSHAFT (K3-VE)	
COMPONENTS.....	EM-131
REMOVAL.....	EM-133
INSTALLATION	EM-137
CYLINDER HEAD GASKET (3SZ-VE)	
COMPONENTS.....	EM-141
REMOVAL.....	EM-146

INSTALLATION.....	EM-156
CYLINDER HEAD GASKET (K3-VE)	
COMPONENTS.....	EM-168
REMOVAL.....	EM-173
INSTALLATION.....	EM-183
TIMING CHAIN (BELT) COVER OIL SEAL (3SZ-VE)	
COMPONENTS.....	EM-196
REMOVAL.....	EM-199
INSTALLATION.....	EM-200
TIMING CHAIN (BELT) COVER OIL SEAL (K3-VE)	
COMPONENTS.....	EM-202
REMOVAL.....	EM-205
INSTALLATION.....	EM-206
ENGINE REAR OIL SEAL (3SZ-VE)	
COMPONENTS.....	EM-208
REMOVAL.....	EM-209
INSTALLATION.....	EM-210
ENGINE REAR OIL SEAL (K3-VE)	
COMPONENTS.....	EM-212
REMOVAL.....	EM-213
INSTALLATION.....	EM-214

