

Upper Arm Ball Joint (60.15.02)

Special Service Tools



Ball joint remover/installer
204-530-1



Ball joint remover/installer
204-530-2




Ball joint remover/installer
204-530-3

Removal


NOTE:

This procedure shows removal and installation of the upper arm ball joint.


1. Remove the upper arm. For additional information, refer to [Upper Arm \(60.35.01\)](#) (Section 204-01)
2. Remove the dust seal.
 - Remove the seal retainer.
 - Remove the circlip.
3. Using the special tools, remove the ball joint.

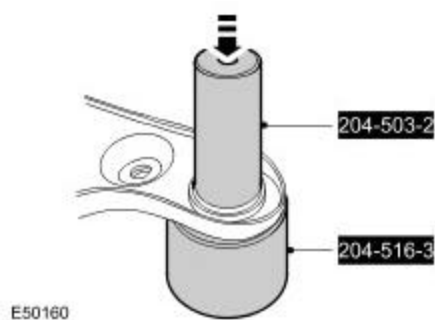

Installation

1.  **CAUTION: Make sure the timing marks are aligned.**

Using the special tools, install the ball joint.

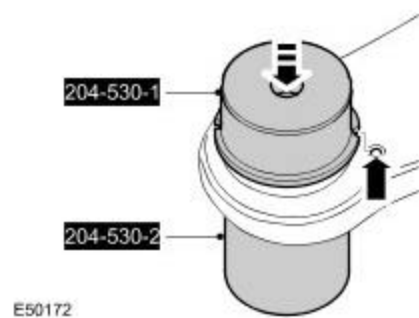

2.  **CAUTION: Circlip holes to be 90 degrees rotated from timing marks.**

Install the circlip.



3. Install the upper arm. For additional information, refer to [Upper Arm \(60.35.01\)](#) (Section 204-01)