


Axle Tube (47.10.42)

Removal

1. Remove the RH halfshaft. For additional information, refer to [Halfshaft RH \(47.10.02\)](#) (Section 205-04)
2. Remove the axle tube.
 - Remove the bolt from the bushing.
 - Remove the 4 bolts.
 - Rotate and remove the axle tube.
 - Remove and discard the O-ring seal.

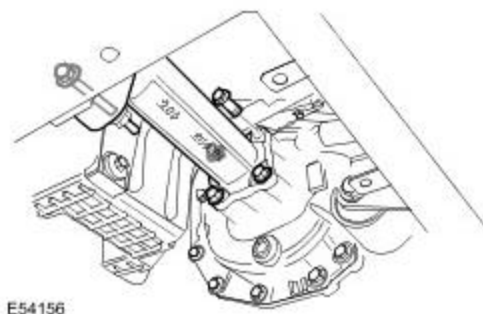

Installation

1. Install the axle tube.
 - Clean the component mating faces.
 - Install a new O-ring seal.
 - Tighten the 4 axle tube bolts to 50 Nm (37 lb.ft).
 - Tighten the axle tube bushing bolt to 63 Nm (46 lb.ft).
2. Install the RH halfshaft. For additional information, refer to [Halfshaft RH \(47.10.02\)](#) (Section 205-04)