


Published: May 14, 2004

## Brake Pedal - Vehicles With: Automatic Transmission (70.35.01)


### Removal

1. Remove the headlamp switch. For additional information, refer to [Headlamp Switch \(86.65.09\)](#) (Section 417 -01)
2. Remove the stoplamp switch. For additional information, refer to [Stoplamp Switch \(70.35.42\)](#) (Section 417 -01)
3. Remove the instrument panel access panel.


▶ Release the 2 clips.

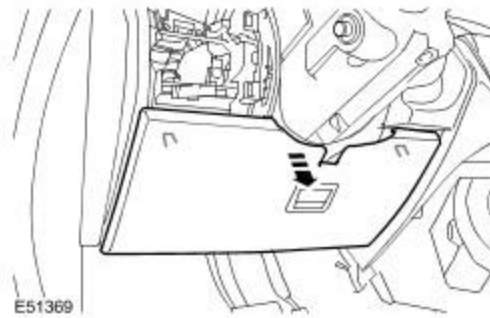


4. Remove the brake pedal bracket.
  - ▶ Release the wiring harness clip.
  - ▶ Remove the 4 Torx bolts.

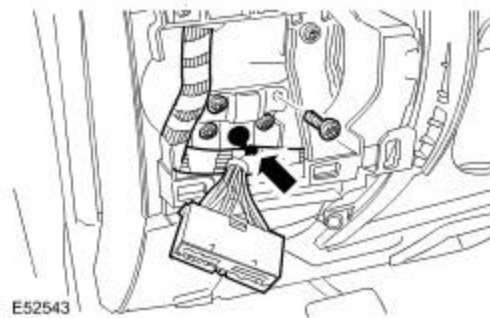


5. Remove the brake pedal clevis pin.
  - ▶ Remove the clip.

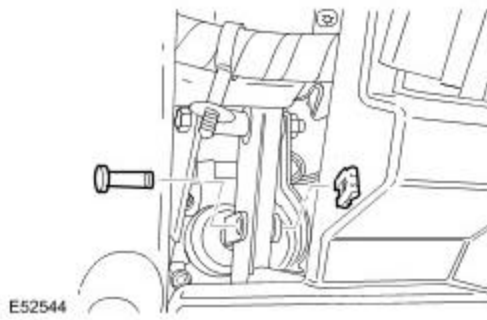

- 6 . Remove the brake pedal.
- ▶ Remove the nut and bolt.

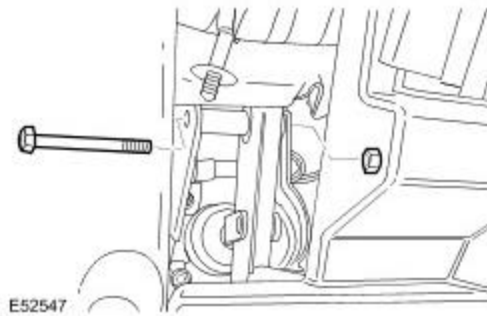

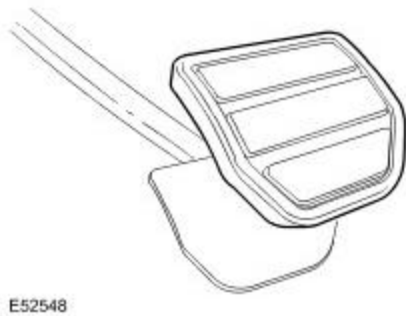


- 7 . **NOTE:**  
Do not disassemble further if the component is removed for access only.  
Remove the brake pedal pad.



## Installation

- 1 . Install the brake pedal pad.
- 2 . Install the brake pedal.
- ▶ Clean the component mating faces.
  - ▶ Tighten the nut and bolt to 45 Nm (33 lb.ft).
- 3 . Install the brake pedal clevis pin.
- ▶ Install the clip.

- 4 . Install the brake pedal bracket.
  -  Tighten the Torx bolts to 10 Nm (7 lb.ft).
  -  Secure the wiring harness.
- 5 . Install the instrument panel access panel.
  -  Secure with the clips.
- 6 . Install the stoplamp switch. For additional information, refer to [Stoplamp Switch \(70.35.42\)](#) (Section 417-01)
- 7 . Install the headlamp switch. For additional information, refer to [Headlamp Switch \(86.65.09\)](#) (Section 417-01)