



Brake Vacuum Pump - 4.0L/4.4L (70.50.19)

Removal


1 .



CAUTION: Always plug any open connections to prevent contamination.

Remove the brake vacuum pump.

- Release and disconnect the electrical connector.
- Disconnect the vacuum line.
- Remove the 2 nuts.

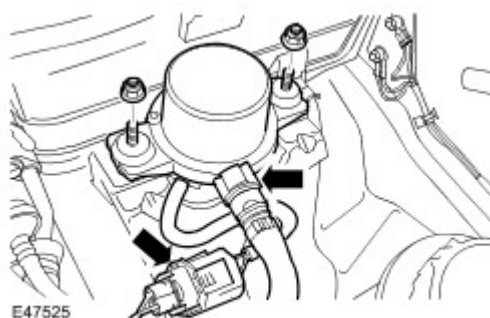


2 .

NOTE :

Do not disassemble further if the component is removed for access only.

Remove the 2 rubber insulators.

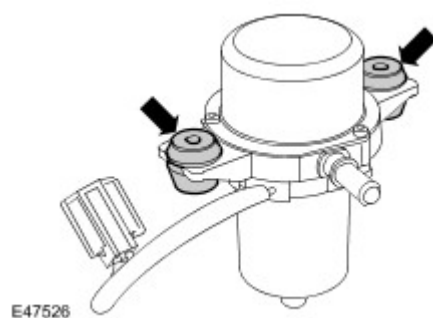

Installation

1 .

To install, reverse the removal procedure.

- Tighten the nuts to 5 Nm (4 lb.ft).