



## Power Steering System Filling and Bleeding

1 . Check the power steering fluid level.


2 .



**CAUTION: Fluid must always be present in the reservoir during bleeding.**

Remove the filler cap and fill to the MAX level mark.

- Install the reservoir filler cap.

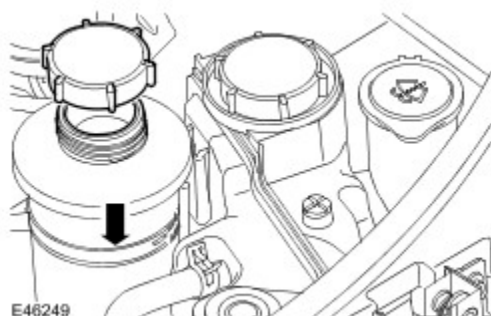

3 . Start the engine and allow to run for 10 seconds, stop the engine.

- Check the power steering fluid, if aerated, wait until fluid is free from bubbles then top-up reservoir to UPPER level mark with recommended fluid.

4 .



**CAUTION: Do not hold steering on full lock for longer than 10 seconds.**

Start the engine and turn steering fully lock to lock, stop the engine.

- Check and top-up power steering fluid level.

5 . Start and run the engine for 2 minutes, turn the steering fully lock to lock.

- Check and top-up power steering fluid level.