



Power Steering Pump - 4.0L (57.20.14)

Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the accessory drive belt. For additional information, refer to [Accessory Drive Belt \(86.10.03\)](#) (Section 303-05)




CAUTION: Before the disconnection or removal of any components, ensure the area around joint faces and connections are clean. Plug any open connections to prevent contamination.

NOTE :

Some oil spillage is inevitable during this operation.


Clamp the power steering pump supply hose to minimise fluid loss.

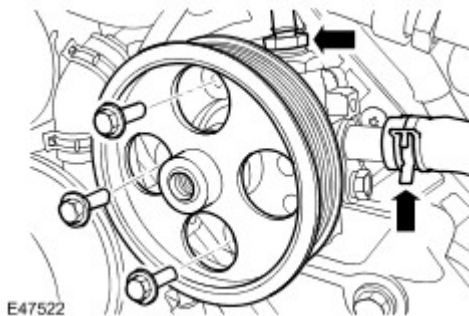


4. Disconnect the high pressure line at the steering pump union.
 - Position an absorbent cloth to collect fluid spillage.
5. Disconnect the power steering pump supply hose.
 - Release the clip.
6. Remove the power steering pump.
 - Remove the 3 bolts.



Installation

1. Install the power steering pump.
 - Clean the component mating faces.
 - Install and tighten the bolts to 25 Nm (18 lb.ft).
2. Connect the power steering supply hose to the steering pump.
 - Clean the component mating faces.

 Secure with the clip.

- 3 . Connect the high pressure line to the steering pump.
 -  Clean the component mating faces.
 -  Install new seals.
 -  Tighten the union to 25 Nm (18 lb.ft).
- 4 . Install the accessory drive belt. For additional information, refer to [Accessory Drive Belt \(86.10.03\)](#) (Section 303-05)
- 5 . Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 6 . Fill and bleed the power steering system. For additional information, refer to [Power Steering System Filling and Bleeding](#) (Section 211-00)