





Published : May 13, 2004

Power Steering Fluid Reservoir - 2.7L Diesel (57.15.08)

Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the air cleaner assembly. For additional information, refer to [Air Cleaner \(19.10.01\)](#) (Section 303-12)
3. Remove the cooling fan shroud.
 - ▶ Release the coolant hose.
 - ▶ Release the 3 clips.

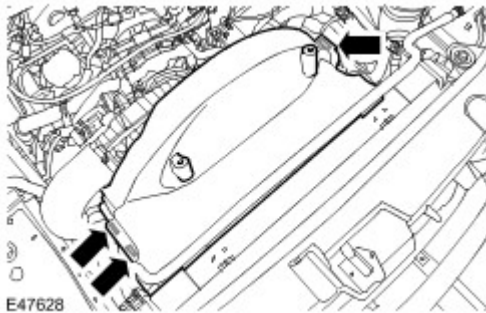


4.  **CAUTION:** Before disconnecting or removing the components, ensure the area around the joint faces and connections are clean. Plug open connections to prevent contamination.

NOTE :

Some fluid spillage is inevitable during this operation.

Remove the power steering reservoir.

- ▶ Position a container to collect spillage.
- ▶ Release the 2 clips.
- ▶ Disconnect the 2 hoses.

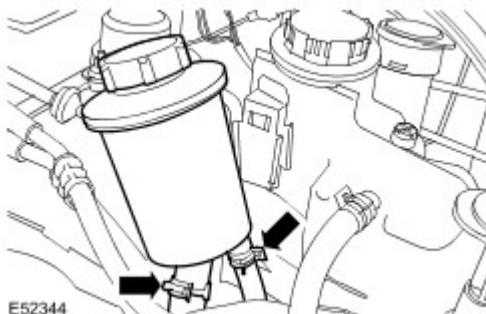

Installation

- 1 . Install the power steering fluid reservoir.
 - Clean the component mating faces.
 - Connect the hoses.
 - Secure with the 2 clips.
- 2 . Install the cooling fan shroud.
 - Secure the coolant hose.
- 3 . Install the air cleaner assembly. For additional information, refer to [Air Cleaner \(19.10.01\)](#) (Section 303-12)
- 4 . Fill and bleed the power steering system. For additional information, refer to [Power Steering System Filling and Bleeding](#) (Section 211-00)