




## Steering Gear Boot (57.10.29)

### Removal

- 1 . Remove the tie-rod end. For additional information, refer to [Tie Rod End \(57.55.07\)](#) (Section 211-03)
- 2 . **NOTE :**  
Note the fitted position.  
Remove the locknut.
- 3 . Remove the steering gear boot.  
➤ Release the 2 clips.

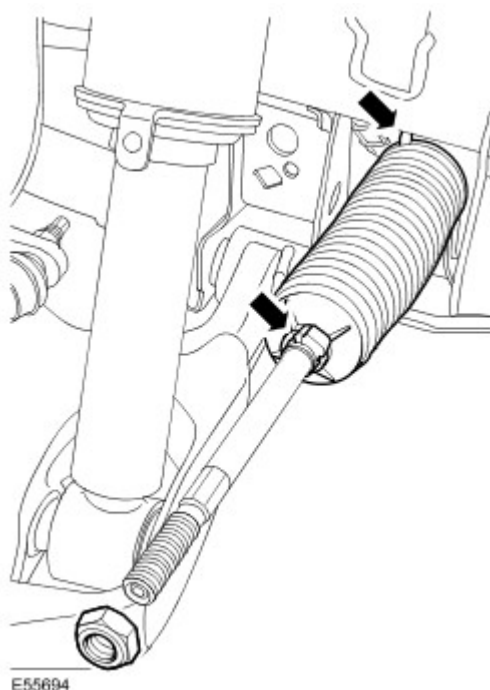

### Installation

- 1 . Install the steering gear boot.  
➤ Clean the component mating faces.  
➤ Secure with the clips.
- 2 . Install the locknut.
- 3 . Install the tie-rod end. For additional information, refer to [Tie Rod End \(57.55.07\)](#) (Section 211-03)