


Published : Jun 30, 2004

## Steering Column Shaft (57.40.22)

### Removal


1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the driver side closing trim panel.
  - Release the clip.
  - Remove the 2 screws.
  - Disconnect the electrical connector.

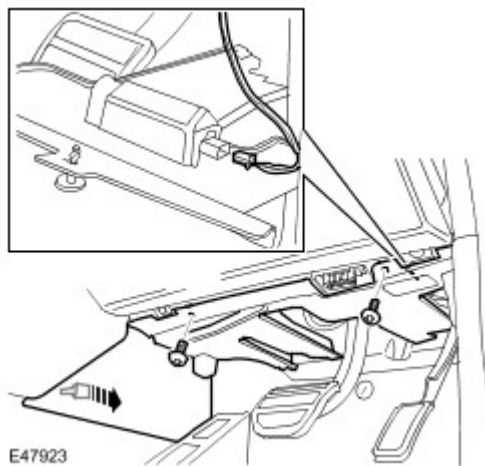


3. Disconnect the steering column intermediate shaft from the steering column.
  - Note the fitted position.
  - Remove the special bolt and discard the nut.



4. Disconnect the steering column intermediate shaft from the lower shaft.
  - Note the fitted position.
  - Remove and discard the bolt.

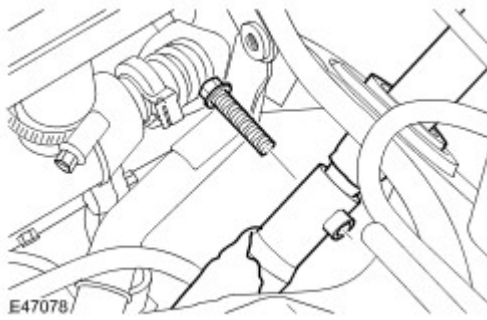

5. Remove the steering column intermediate shaft.
  - ▶ Release the 2 grommets.
6. **NOTE :**  
Do not disassemble further if the component is removed for access only.  
**NOTE :**  
Note the fitted position.  
Remove the 2 intermediate shaft grommets.

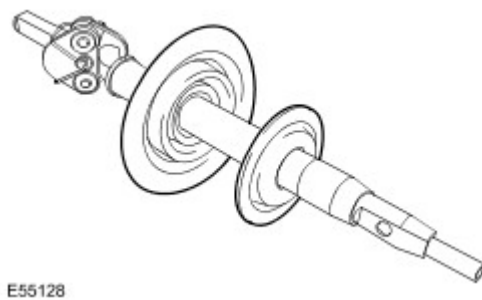

## Installation

1. Install the steering column intermediate shaft.
  - ▶ Install the grommets.
2. Connect the steering column intermediate shaft to the lower shaft.
  - ▶ Tighten the new bolt to 25 Nm (18 lb.ft).
3. Connect the steering column intermediate shaft to the steering column.
  - ▶ Install the special bolt and tighten the new nut to 22 Nm (16 lb.ft).
4. Install the driver side closing trim panel.
  - ▶ Connect the electrical connector.
  - ▶ Secure the clip.
  - ▶ Tighten the screws.
5. Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)