


Ignition Switch (86.65.02)

Removal

- 1 . Fully extend the steering column for access.

- 2 . Remove the steering column upper shroud.


▶ Release the 4 clips.

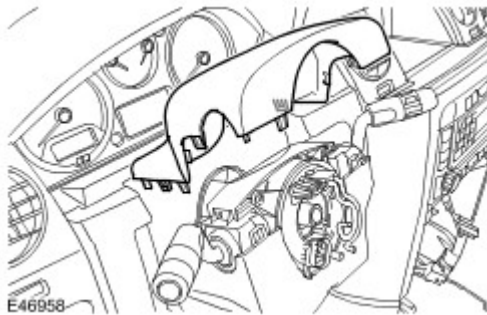

- 3 . Remove the steering column lower shroud.

▶ Remove the 3 Torx screws.

▶ Release the steering column adjustment lever.

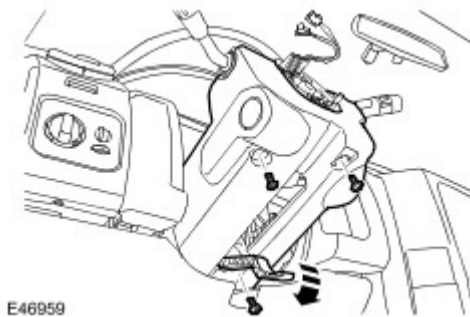


- 4 .  **CAUTION: The ignition key must be removed prior to the removal of the ignition switch.**

Remove the ignition switch.

▶ Disconnect the electrical connector.

▶ Depress the 2 clips.

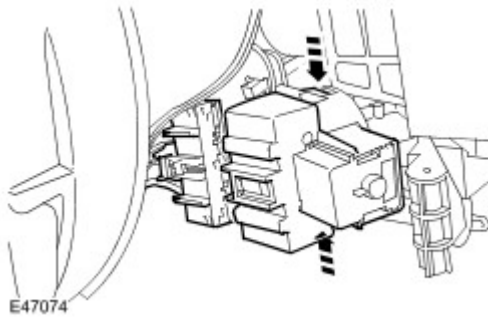

Installation

- 1 . Install the ignition switch.
 - Secure with the clips.
 - Connect the electrical connector.
- 2 . Install the steering column shrouds.
 - Tighten the Torx screws.
 - Secure the clips.
 - Secure the adjustment lever.