


## Steering Column Multifunction Switch LH (86.65.55)

### Removal

- 1 . Fully extend the steering column for access.
- 2 . Remove the steering column upper shroud.

➤ Release the 6 clips.

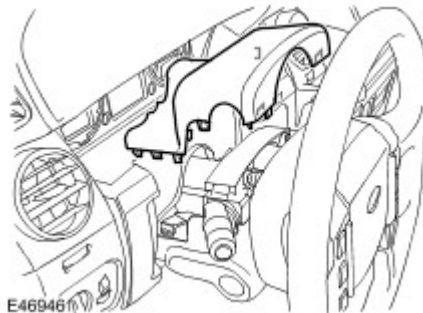

- 3 . Remove the steering column lower shroud.

➤ Remove the 3 Torx screws.


➤ Release the steering column adjustment lever.



- 4 . Remove the steering column multifunction switch.

➤ Disconnect the electrical connector.

➤ Remove the 2 screws.

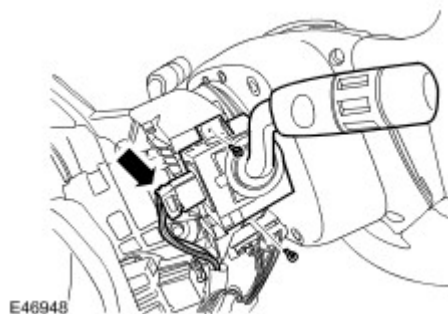

## Installation

- 1 . To install, reverse the removal procedure.