

Published : Mar 2, 2001

Cylinder Head Distortion

- 1 . Measure the cylinder block/cylinder head distortion.
 - Using the special tool, measure the mating face distortion.
 - If the value is not to specification rework the mating face.

