

Published : Mar 2, 2001

Piston Pin Diameter

1 . NOTE :

The piston and piston pin are a matched pair. Do not mix up the components.

Measure the piston pin diameter.

- Measure the diameter in two directions.
- If the values are not to specification, install a new piston and a new piston pin.

