

Published : Mar 2, 2001


Piston Pin to Bore Diameter

1 . NOTE :

The piston and piston pin form a matched pair. Do not mix up the components.

Measure the diameter of the piston pin bore.

- Measure the diameter in two directions.
- If the values are not to specification, install both a new piston and a new piston pin.

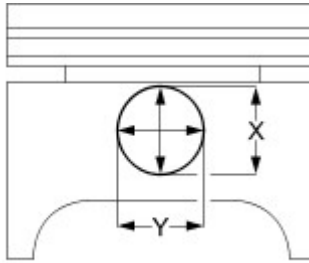

VUJ0002232