

Published : Jul 9, 2004

## Engine Oil Draining and Filling (12.60.05)

1 . Disconnect the battery ground cable.

[Specifications](#)

2 .



**WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.**

Raise and support the vehicle.

3 . Remove the engine undershield.


[Engine Undershield \(76.10.50\)](#)

4 . Remove the oil pan drain plug.

- Position a container to collect the fluid.
- Discard the oil drain plug seal.

5 . Remove the oil filter.

- Position a container to collect the fluid.
- Discard the oil filter.

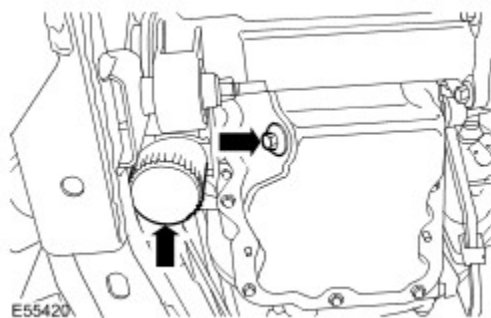

6 . To install, reverse the removal procedure.

- Lubricate the oil filter seal with clean engine oil and tighten to 18 Nm (13 lb.ft).
- Install a new seal.
- Tighten the drain plug to 25 Nm (18 lb.ft).

7 . Fill the engine with oil.

8 . Check and top-up the engine oil.