




## Engine Mount LH (12.45.11)

### Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)


2.  **WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.**

Raise and support the vehicle.

3. Remove the LH exhaust manifold. For additional information, refer to [Exhaust Manifold LH \(30.15.10\)](#) (Section 303-01)

4. Release the starter motor cable.
  - Release the terminal cover.
  - Remove the terminal nut insulator.
  - Remove the nut.




5.  **CAUTION: Protect the engine during this operation.**

Remove the engine mount bracket.

- Support the engine.
- Remove the 4 bolts.

6. Remove the engine mount.
  - Remove and discard the 2 bolts.

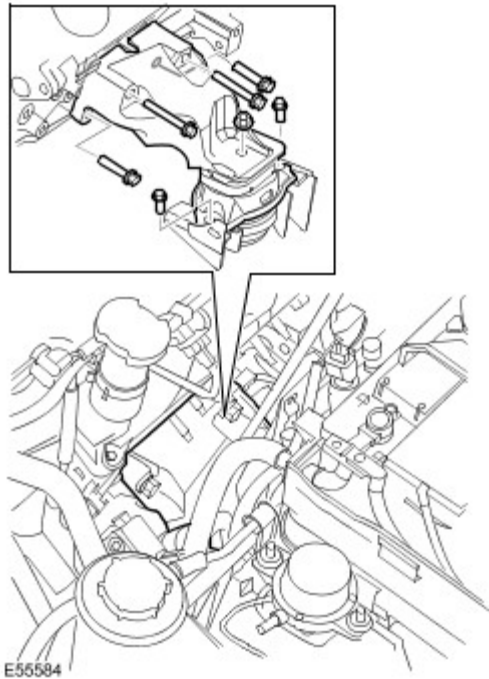

## Installation

- 1 . Install the engine mount.
  - Clean the component mating faces.
  - Tighten the new bolts to 45 Nm (33 lb.ft), then a further 60 degrees.
- 2 . Install the engine mount bracket.
  - Clean the component mating faces.
  - Tighten the bolts to 80 Nm (59 lb.ft).
  - Remove the engine support.
- 3 . Connect the starter motor cable.
  - Tighten the nut to 10 Nm (7 lb.ft).
  - Install the terminal nut insulator.
  - Install the cover.
- 4 . Install the exhaust manifold. For additional information, refer to [Exhaust Manifold LH \(30.15.10\)](#) (Section 303-01)
- 5 . Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)