




Oil Pan (12.60.44)


Removal


1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)



2.  **WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.**


Raise and support the vehicle.

3. Drain the engine oil. For additional information, refer to [Engine Oil Draining and Filling \(12.60.05\)](#) (Section 303-01)

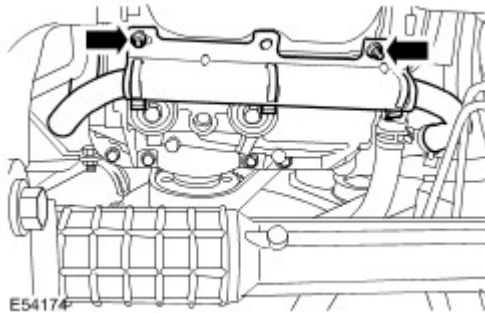
4. Release the harness bracket.
 Remove the 2 nuts.



5. Remove the oil pan.
 Remove the 10 bolts.
 Remove and discard the gasket.

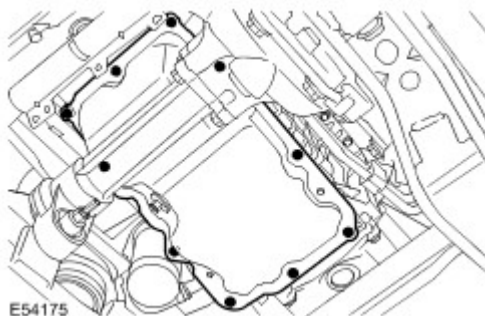

Installation

1. Install the oil pan.
 Clean the component mating faces.

- ▶ Install a new gasket.
- ▶ Evenly and progressively tighten the bolts to 10 Nm (7 lb.ft).

2 . Install the harness bracket.

- ▶ Tighten the nuts to 6 Nm (4 lb.ft).

3 . Fill the engine with oil. For additional information, refer to [Engine Oil Draining and Filling \(12.60.05\)](#) (Section 303-01)

4 . Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)