




Oil Pump (12.60.26)


Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)


2.  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

3. Remove the front wheels and tires.
4. Remove the cylinder block cradle. For additional information, refer to [Cylinder Block Cradle \(12.25.06\)](#) (Section 303-01)
5. Remove the oil pump assembly.
 - Remove the 2 Torx screws.
 - Remove the driveshaft.

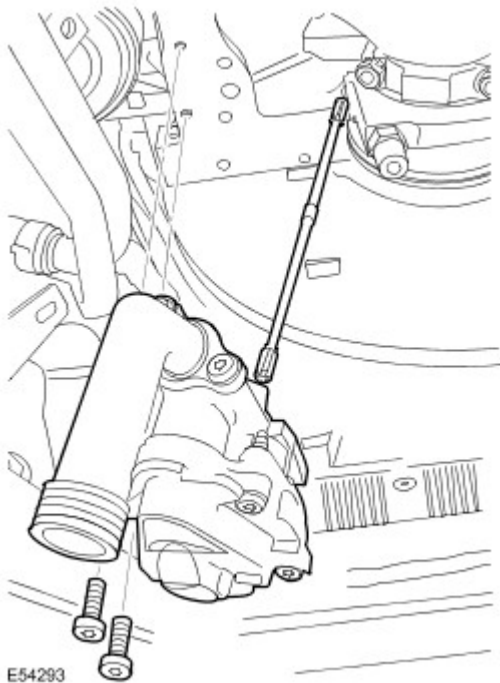


6. **NOTE :**
 - Do not disassemble further if the component is removed for access only.
 - Remove the oil pickup pipe.
 - Remove the 3 Torx screws.
 - Remove and discard the seal.

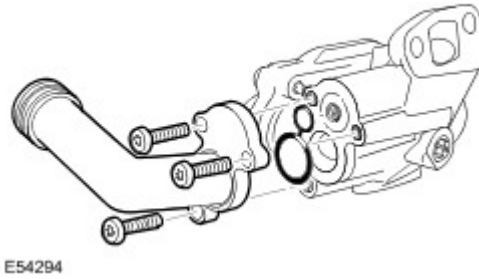

Installation

1. Install the oil pickup pipe.
 - ▶ Clean the component mating faces.
 - ▶ Install a new seal.
 - ▶ Tighten the Torx screws to 10 Nm (7 lb.ft).

2.  **CAUTION: The oil pump driveshaft is not symmetrical. The longer end shown, is fitted into the oil pump.**

Install the oil pump assembly.

- ▶ Clean the component mating faces.
- ▶ Prime the oil pump.
- ▶ Install the driveshaft.
- ▶ Tighten Torx screws to 20 Nm (15 lb.ft).



E54292

3. Install the cylinder block cradle. For additional information, refer to [Cylinder Block Cradle \(12.25.06\)](#) (Section 303-01)
4. Install the front wheels and tires.
5. Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)