



Engine Oil Draining and Filling (12.60.05)

1 . Disconnect the battery ground cable.

[Specifications](#)

2 .



WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.


Raise and support the vehicle.

3 . Remove the engine undershield.

[Engine Undershield \(76.10.50\)](#)


4 . Remove the oil pan drain plug.

- Position a container to collect the fluid.
- Discard the oil drain plug seal.

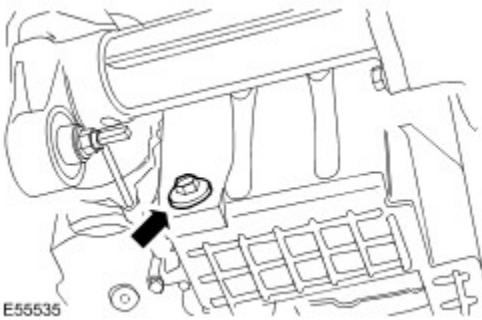


5 . Remove the radiator access panel.

- Remove the 4 bolts.

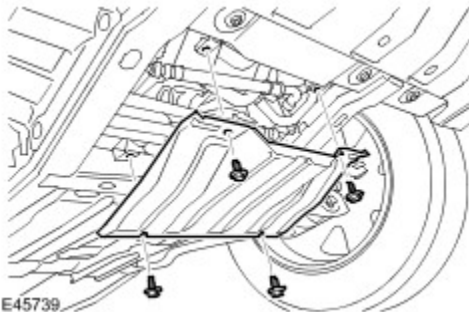

6 . Remove the oil filter.

- Position a container to collect the fluid.
- Discard the oil filter.

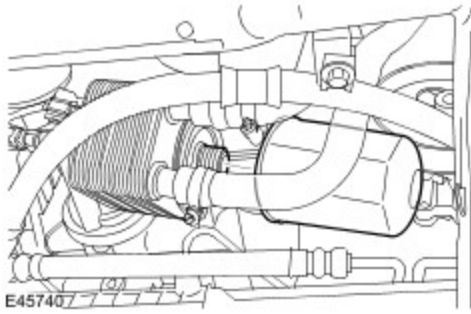

- 7 . Install the engine oil filter.
 - Lubricate the oil filter seal with clean engine oil and tighten to 18 Nm (13 lb.ft).
 - Install a new seal.
 - Tighten the drain plug to 25 Nm (18 lb.ft).
- 8 . Tighten the drain plug to 25 Nm (18 lb.ft).
 - Install a new seal.
- 9 . Install the engine undershield.
[Engine Undershield \(76.10.50\)](#)
- 10 . Fill the engine with oil.
- 11 . Check and top-up the engine oil.
- 12 . Connect the battery ground cable.
[Specifications](#)