



## Flexplate (12.53.13)

### Removal

1.



**WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

2.

Remove the transmission.

3.


**NOTE :**

Prevent the flexplate from rotating

Remove the torque converter flexplate.



Remove the 8 bolts.

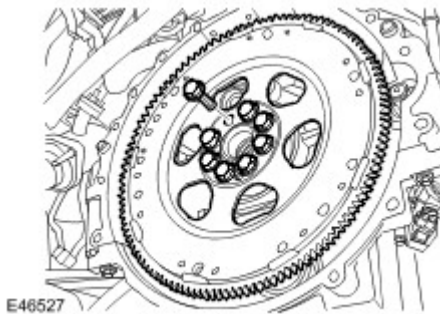

### Installation

1.

**NOTE :**

Prevent the flexplate from rotating

Install the torque converter flexplate.



Clean the component mating faces.




Tighten the bolts evenly in 2 stages to the sequence shown.



Tighten the bolts to 15 Nm (11 lb ft).



Tighten the bolts to 110 Nm (81 lb.ft).

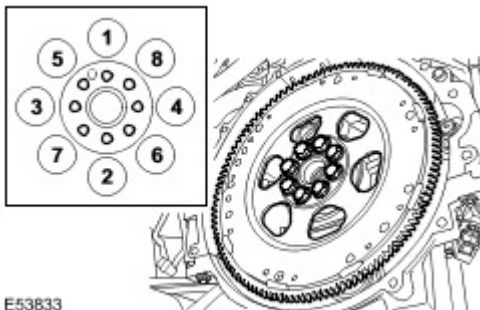

- 2 . Install the transmission.