



Published : Mar 1, 2005

Variable Camshaft Timing (VCT) Unit

Removal

NOTE :

The removal and installation of the RH VCT unit is similar to the LH and is covered within the timing drive component procedure.

- 1 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 2 . Remove the timing drive components. For additional information, refer to [Timing Drive Components \(12.65.13\)](#) (Section 303-01)

Installation

- 1 . Install the timing drive components. For additional information, refer to [Timing Drive Components \(12.65.13\)](#) (Section 303-01)
- 2 . Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)