




Oil Pump Screen and Pickup Tube (12.60.20)


Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)

2.  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

3. Remove the oil pan. For additional information, refer to [Oil Pan \(12.60.44\)](#) (Section 303-01)
4. Remove the oil pump screen and pickup tube.
 - Remove the bolt.
 - Remove and discard both O-ring seals.
 - Clean the seal contact area.

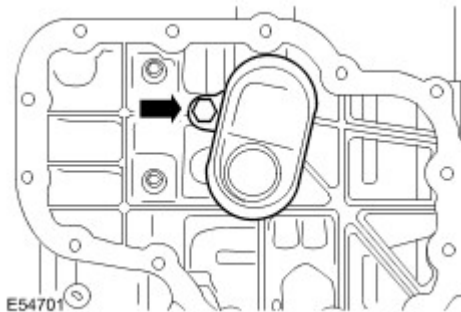

Installation

1. **NOTE :**
Lubricate new seals with clean engine oil.
Install the oil pump screen and pickup tube.
 - Clean the components.
 - Install new O-ring seals.
 - Tighten the bolt to 10 Nm (7 lb.ft).
2. Install the oil pan. For additional information, refer to [Oil Pan \(12.60.44\)](#) (Section 303-01)
3. Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)