


Published : Mar 2, 2005

Cooling Fan Shroud (26.25.11)

Removal

- 1 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 2 . Remove the air intake resonator. For additional information, refer to [Intake Air Resonator \(19.70.03\)](#) (Section 303-12A)
- 3 . Remove the upper fan shroud.
 - ▶ Release the coolant expansion hose.
 - ▶ Release the fan wiring harness clip.
 - ▶ Release the 4 fan shroud clips.

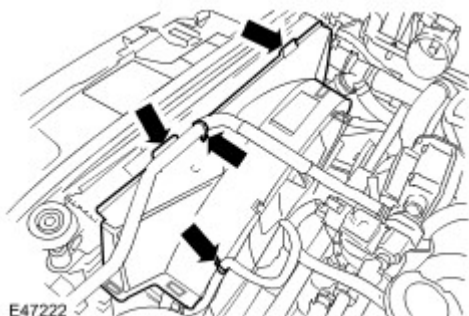

Installation

- 1 . To install, reverse the removal procedure.