

Cooling Fan Shroud (26.25.11)

Removal

1 .



WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

2 .


Remove the cooling fan assembly. For additional information, refer to [Cooling Fan \(26.25.19\)](#) (Section 303-03)

3 .

Remove the radiator access panel.




Remove the 4 bolts.

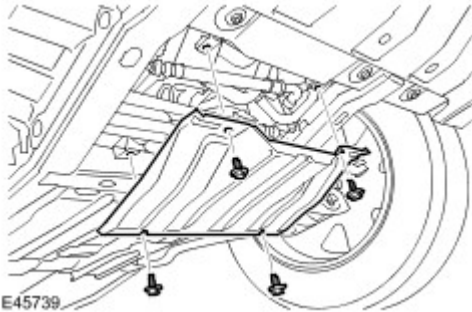

4 .

Release the coolant pipes and hoses from the lower shroud.

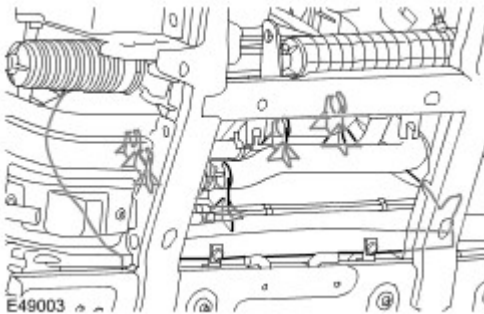

5 .


Remove the cooling fan lower shroud.



Release the 2 clips.



Remove the screw.

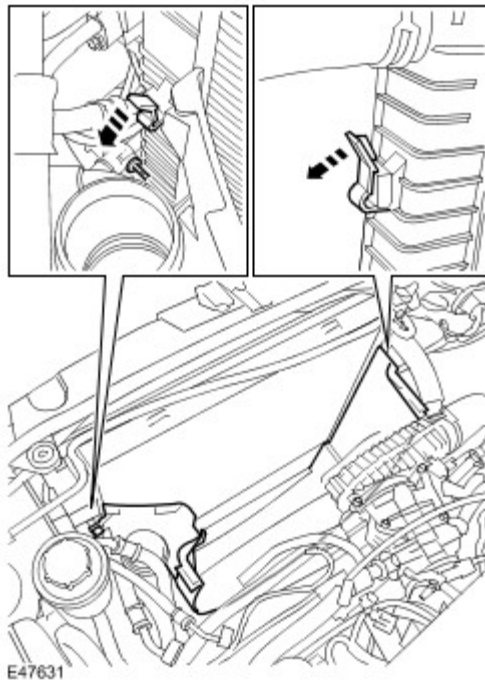

Installation

- 1 . Install the cooling fan lower shroud.
 - Tighten the screw.
 - Secure with the clips.
- 2 . Install the coolant pipes and hoses to the lower shroud.
- 3 . Install the radiator access panel.
 - Tighten the bolts to 10 Nm (7 lb.ft).
- 4 . Install the cooling fan assembly. For additional information, refer to [Cooling Fan \(26.25.19\)](#) (Section 303-03)