


Thermostat (26.45.01)


Removal

- 1 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 2 . Drain the cooling system. For additional information, refer to [Cooling System Draining, Filling and Bleeding \(26.10.01\)](#) (Section 303-03)
- 3 . Remove the cooling fan shroud. For additional information, refer to [Cooling Fan Shroud \(26.25.11\)](#) (Section 303-03)


- 4 . Remove the radiator access panel.
▶ Remove the four retaining bolts.

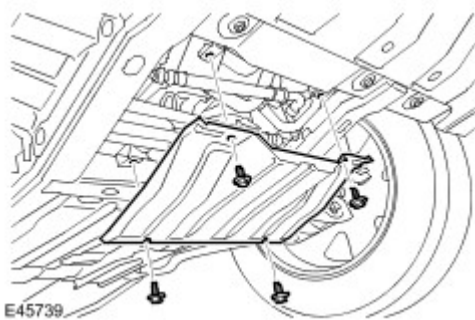

- 5 . Remove the front LH splash shield.
▶ Remove the four clips.

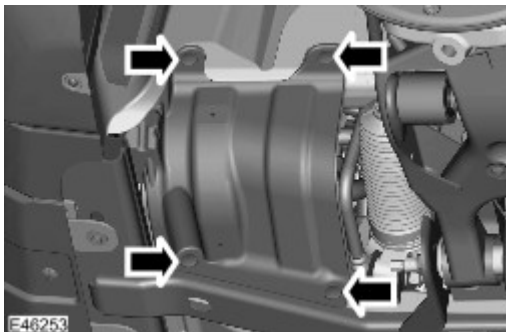


- 6 . Disconnect the fuel cooler return hose from the thermostat.
▶ Release the clip.

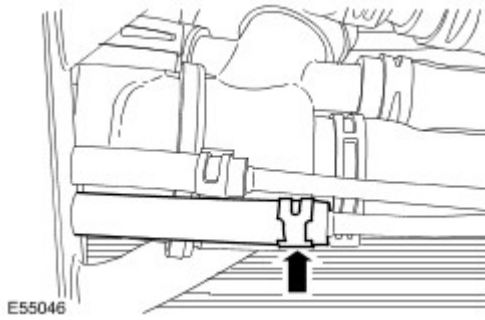


7. Disconnect the heater return hose from the heater return pipe.

▶ Release from the clip.

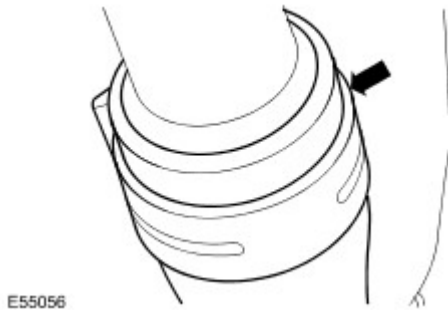


8. Disconnect the thermostat to top hose 'T' piece hose.

▶ Release from the clip.

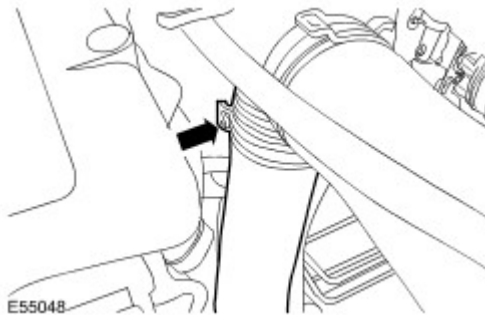

9. Disconnect the thermostat hose from the engine coolant rail.

▶ Release the clip.

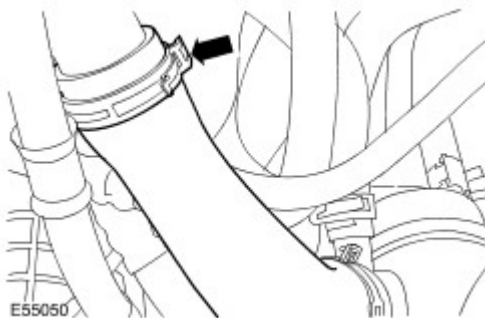


10. Disconnect the thermostat to fuel fired heater hose from the fuel fired heater.

▶ Release the clip.




11. Disconnect the radiator lower hose from the radiator.


▶ Release the clip.

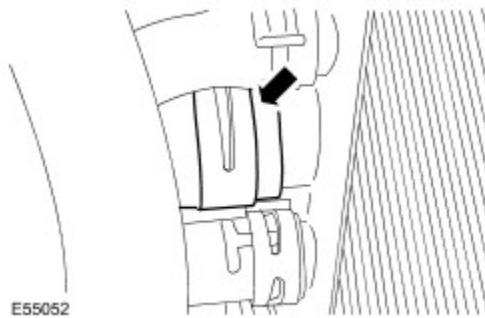

12. Release the securing straps.

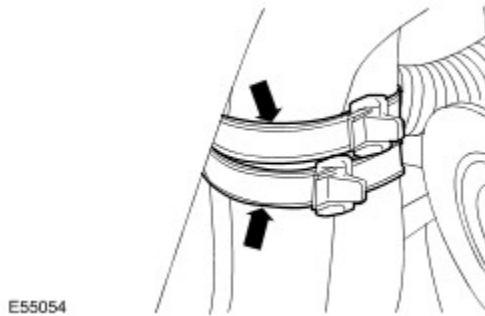

13. Release the coolant hose retaining clip.

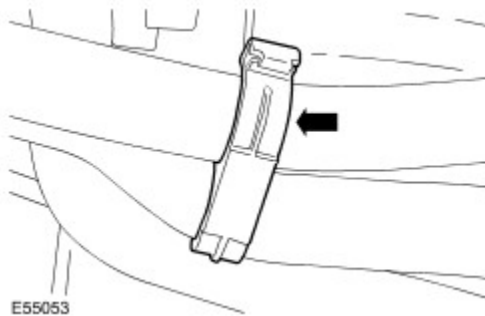

14. Release the coolant hose retaining clip.



15. Remove the thermostat and hose assembly.

Installation

1. Install the thermostat and hose assembly.
2. Install the coolant hose retaining clip.
3. Install the coolant hose retaining clip.
4. Install the securing straps.
5. Connect the radiator lower hose to the radiator.
6. Connect the thermostat to fuel fired heater hose to the fuel fired heater.
7. Connect the thermostat hose to the engine coolant rail.
8. Connect the thermostat to top hose 'T' piece hose.
9. Connect the heater return hose to the heater return pipe.
10. Connect the fuel cooler return hose to the thermostat.
11. Install the front LH splash shield.
 - ▶ Install the four clips.
12. Install the radiator access panel.
 - ▶ Install the four retaining bolts.
13. Install the cooling fan shroud. For additional information, refer to [Cooling Fan Shroud \(26.25.11\)](#) (Section 303-03)
14. Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
15. Refill and bleed the cooling system. For additional information, refer to [Cooling System Draining](#).

[Filling and Bleeding \(26.10.01\)](#) (Section 303-03)