



Fuel Injectors (19.60.12)

Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)


2.  **WARNING:** Do not smoke or carry lighted tobacco or open flame of any type when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.

 **WARNING:** Do not carry or operate cellular phones when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.

 **CAUTION:** Before the disconnection or removal of any components, ensure the area around joint faces and connections are clean. Plug any open connections to prevent contamination.

Remove the fuel rail. For additional information, refer to [Intake Manifold Assembly \(30.15.02\)](#) (Section 303-04B)

3. Remove the fuel injectors.
 - Release the 8 clips.
 - Discard the fuel injector O-ring seals.

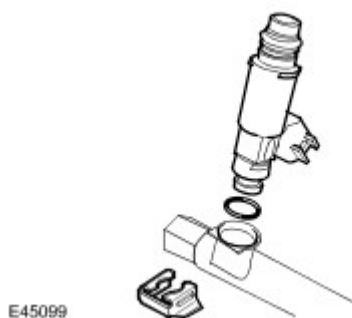

Installation

1. Clean the component mating faces.
2. To install, reverse the removal procedure.
 - Install fuel injector O-ring seals.
 - Lubricate the O-ring seals with clean engine oil.