

Published : Apr 28, 2004

Throttle Body Gasket

Removal

- 1 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 2 . Remove the engine cover. For additional information, refer to [Engine Cover - 4.4L \(12.30.50\)](#) (Section 501-05)
- 3 . Remove the air intake resonator. For additional information, refer to (Section 303-12)
- 4 . Release the throttle body.
 - Remove the 4 bolts.
 - Remove and discard the throttle body gasket.



Installation

- 1 . Install the throttle body.
 - Clean the components.
 - Install a new gasket.
 - Tighten the 4 bolts to 10 Nm (7 lb.ft).
- 2 . Install the air intake resonator. For additional information, refer to (Section 303-12)
- 3 . Install the engine cover. For additional information, refer to [Engine Cover - 4.4L \(12.30.50\)](#) (Section 501-05)
- 4 . Connect the battery ground cable.