




Turbocharger Intake Tube (19.42.11)

Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the power steering pump. For additional information, refer to [Power Steering Pump - 2.7L Diesel \(57.20.14\)](#) (Section 211-02)
3. Remove the support bracket.

➤ Remove the two retaining bolts.




4.  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise the vehicle.


5. Disconnect the breather hose.

➤ Release the clip.

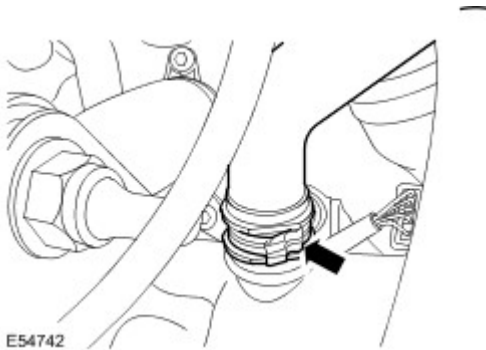

6. Disconnect the turbocharger intake tube.

➤ Loosen the clip.

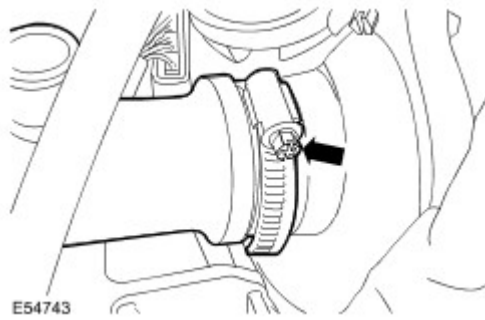

- 7 . Remove the charge air cooler intake pipe.
 - ▶ With assistance, reposition the turbocharger intake tube.
- 8 . With assistance, remove the turbocharger intake tube.

Installation

- 1 . To install, reverse the removal procedure.
 - ▶ Tighten the two retaining bolts to 10 Nm (7 lb.ft).