




## Accessory Drive Belt Tensioner (86.10.06)

### Removal

- 1 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 2 . Remove the generator drive belt. For additional information, refer to [Accessory Drive Belt \(86.10.03\)](#) (Section 303-05)
- 3 . Remove the generator drive belt tensioner.
  - ▶ Remove the generator drive belt tensioner bolt.

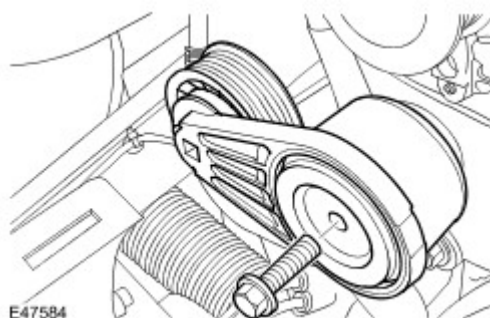

### Installation

- 1 . Install the generator drive belt tensioner.
  - ▶ Clean the component mating faces.
  - ▶ Tighten the bolt to 45 Nm (33 lb.ft).
- 2 . Install the generator drive belt. For additional information, refer to [Accessory Drive Belt \(86.10.03\)](#) (Section 303-05)
- 3 . Connect the battery ground cable.