




Cooling Fan Belt Tensioner (26.25.02)

Removal


1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the viscous fan drive belt. For additional information, refer to [Cooling Fan Belt \(26.25.01\)](#) (Section 303-05)
3. Remove the viscous fan drive belt tensioner.

➤ Remove the bolt.

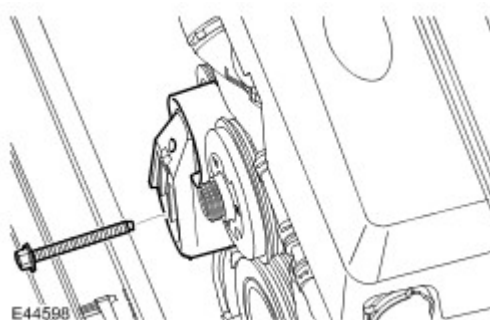

4. **NOTE :**
Do not disassemble further if the component is removed for access only.
Remove the drive belt pulley.

➤ Remove the bolt.

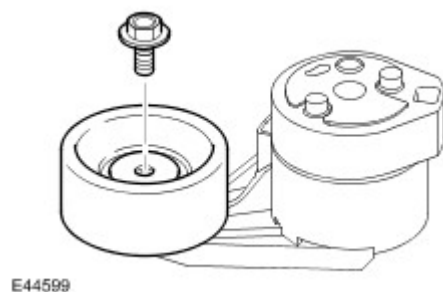

Installation

1. To install, reverse the removal procedure.
 - Tighten the pulley bolt to 25 Nm (18 lb.ft).
 - Tighten the tensioner bolt to 40 Nm (30 lb.ft).
2. Install the viscous fan drive belt. For additional information, refer to [Cooling Fan Belt \(26.25.01\)](#) (Section 303-05)