




Cooling Fan Belt (26.25.01)

Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Coupling unit - viscous fan -renew For additional information, refer to [Cooling Fan \(26.25.19\)](#) (Section 303-03)
3. Remove the cooling fan drive belt.
 - ▶ Using a 1/2 inch square drive bar, rotate the drive belt tensioner clockwise.

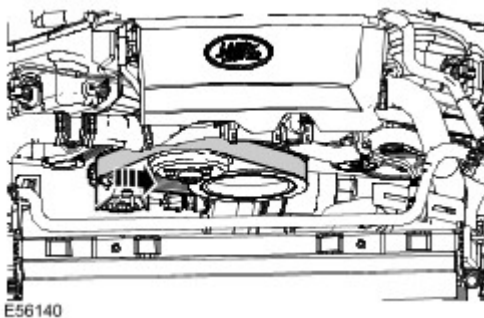

Installation

1. To install, reverse the removal procedure.