




Accessory Drive Belt Tensioner (86.10.06)

Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the accessory drive belt. For additional information, refer to [Accessory Drive Belt \(86.10.03\)](#) (Section 303-05)
3. Remove the accessory drive belt tensioner.

➤ Remove the bolt.

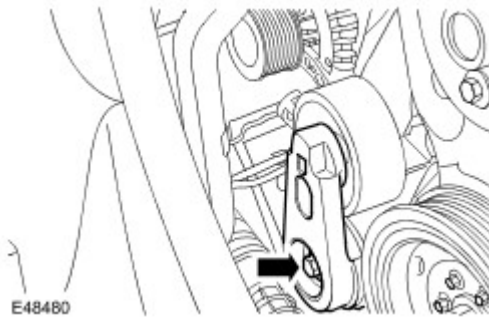

4. Remove the accessory drive belt tensioner pulley.

➤ Remove the Torx bolt.



Installation

1. Install the accessory drive belt tensioner pulley.
 - Clean the components.
 - Tighten the bolt to 25 Nm (18 lb.ft).
2. Install the accessory drive belt tensioner.
 - Clean the components.
 - Tighten the bolt to 45 Nm (33 lb.ft).

- 3 . Install the accessory drive belt. For additional information, refer to [Accessory Drive Belt \(86.10.03\)](#) (Section 303-05)