



Published : Jul 8, 2004

## Fuel Injection Pump Pulley

### Removal

- 1 . Refer to Fuel Pump. For additional information, refer to [Fuel Pump \(19.45.08\)](#) (Section 303-04C )

### Installation

- 1 . Refer to Fuel Pump. For additional information, refer to [Fuel Pump \(19.45.08\)](#) (Section 303-04C )