




Starter Motor (86.60.01)

Removal


1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)

2.  **WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.**

Raise and support the vehicle.

3. Remove the exhaust system. For additional information, refer to [Exhaust System \(30.10.08\)](#) (Section 309-00)

4. Remove the starter motor.
 - Remove the 2 bolts.
 - Remove the terminal upper cover.
 - Remove the terminal lower cover.
 - Remove the nut.
 - Disconnect the 2 electrical connectors.

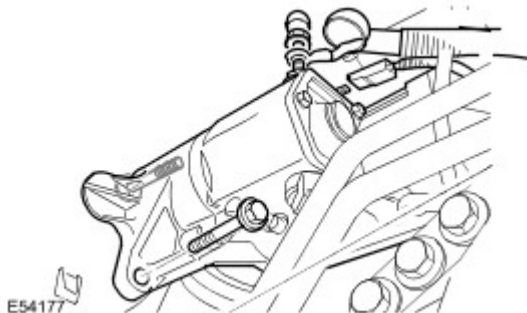

Installation

1. Install the starter motor.
 - Clean the component mating faces.
 - Connect the electrical connectors.
 - Tighten the nut to 10 Nm (7 lb.ft).
 - Install the terminal lower cover.
 - Install the terminal upper cover.
 - Tighten the bolts to 45 Nm (33 lb.ft).
2. Install the exhaust system. For additional information, refer to [Exhaust System \(30.10.08\)](#) (Section

309-00)

- 3 . Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)