



Glow Plug Module (19.60.33)

Removal


NOTE :

The glow plug module is an integral part of the engine control module and cannot be replaced separately.

- 1 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 2 . Remove the four-wheel drive (4WD) control module. For additional information, refer to [Four-Wheel Drive \(4WD\) Control Module \(41.30.01\)](#) (Section 308-07)

- 3 . **NOTE :**
Right hand drive shown, for Left hand drive reverse the sequence.
Disconnect the three glow plug module electrical connectors in the sequence shown.

► Position the three engine harness electrical connectors aside for access.

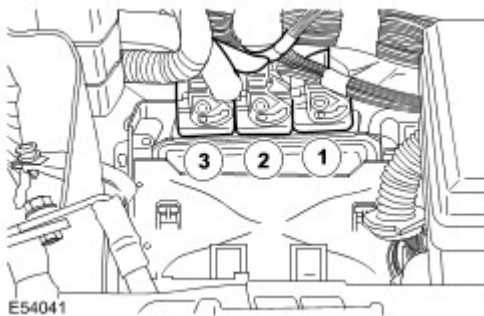


- 4 . Remove the glow plug module securing plate.

► Remove the four retaining bolts.



- 5 . Remove the glow plug module.

► Remove the glow plug module top cover.

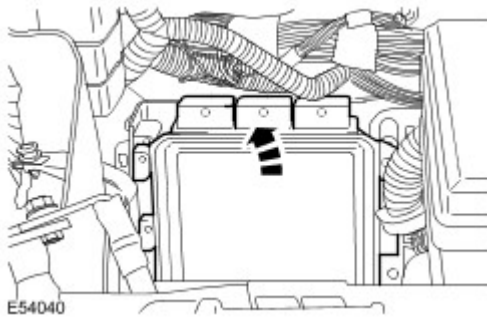

Installation

- 1 . Install the glow plug module.
 - ▶ Install the glow plug module top cover.
- 2 . Install the glow plug module securing plate.
 - ▶ Install the four retaining bolts.
- 3 . Connect the three glow plug module electrical connectors.
- 4 . Install the 4WD control module. For additional information, refer to [Four-Wheel Drive \(4WD\) Control Module \(41.30.01\)](#) (Section 308-07)
- 5 . Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 6 . Connect T4 to calibrate a new ECM.