




Glow Plugs (19.60.31)

Removal

- 1 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 2 . Remove the crankcase vent oil separator. For additional information, refer to [Crankcase Vent Oil Separator \(17.10.04\)](#) (Section 303-08)
- 3 . Remove the glow plugs.

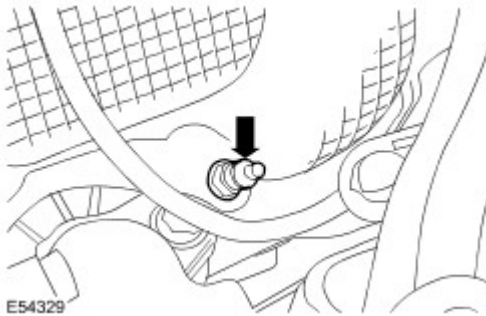

Installation

- 1 . To install, reverse the removal procedure.
 - ▶ Tighten the glow plugs to 10 Nm (7 lb.ft).