




Positive Crankcase Ventilation (PCV) Valve (17.10.14)


Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the engine cover. For additional information, refer to [Engine Cover - 4.0L \(12.30.50\)](#) (Section 501-05)

3.  **CAUTION: Always plug any open connections to prevent contamination.**

Remove the PCV valve.

- Disconnect the PCV hose.
- Disconnect the electrical connector.
- Release the PCV valve.
- Remove and discard the O-ring seal.

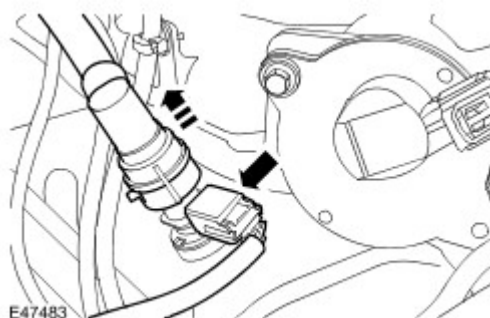

Installation

1. To install, reverse the removal procedure.
 - Clean the components.
 - Install a new O-ring seal.
 - Lubricate the seal with clean engine oil.
2. Connect the battery ground cable.