




## Positive Crankcase Ventilation (PCV) Valve (17.10.14)


### Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the engine cover. For additional information, refer to [Engine Cover - 4.4L \(12.30.50\)](#) (Section 501-05)

3.  **CAUTION: Always plug any open connections to prevent contamination.**

Remove the PCV valve.

- Disconnect the PCV hose.
- Remove the 2 bolts.
- Release the PCV valve.

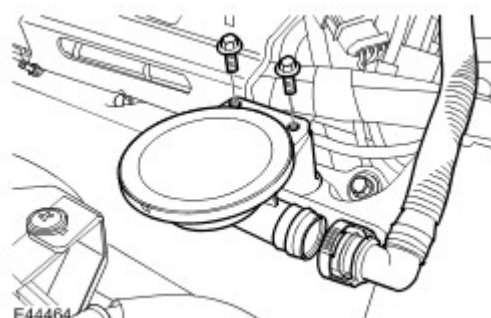

### Installation

1. To install, reverse the removal procedure.
  - Clean the components.
  - Lubricate the seal with clean engine oil.
  - Tighten the bolts to 10 Nm (7 lb.ft).