
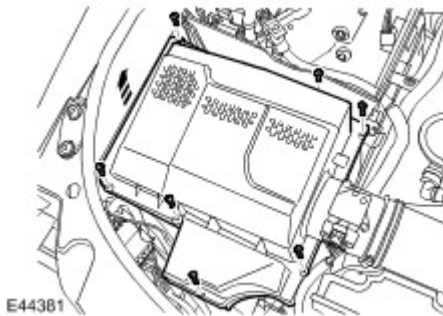




Air Cleaner Element (19.10.10)

Removal

- 1 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 2 . Remove the air cleaner housing cover.
 Remove the 7 screws.
- 3 . Remove the air cleaner element.



Installation

- 1 . Clean the base of the air cleaner.
- 2 . To install, reverse the removal procedure.