
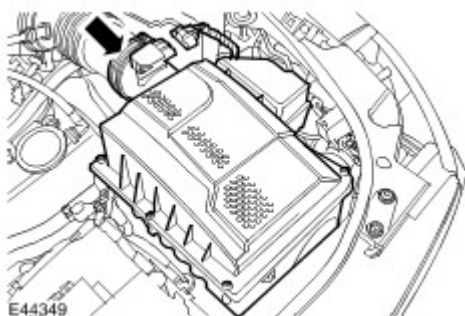




Air Cleaner (19.10.01)

Removal

- 1 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 2 . Release the air cleaner intake pipe.
 Loosen the clip.
- 3 . Disconnect the mass air flow (MAF) sensor electrical connector.



- 4 . Remove the air cleaner assembly.

Installation

- 1 . **NOTE :**
When installing the air cleaner, make sure the locating pegs fit securely into the grommets.
To install, reverse the removal procedure.