




Intake Air Resonator (19.70.03)

Removal

- 1 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 2 . Remove the air cleaner outlet pipe and intake air resonator.
 - ▶ Release the 2 clips.
 - ▶ Disconnect the breather hose.

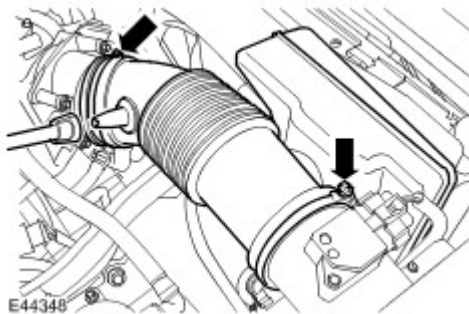

Installation

- 1 . To install, reverse the removal procedure.