




## Air Cleaner Element (19.10.10)

### Removal

- 1 . Release the air cleaner housing cover.  
▶ Remove the 7 screws.
- 2 . Remove the air cleaner element.

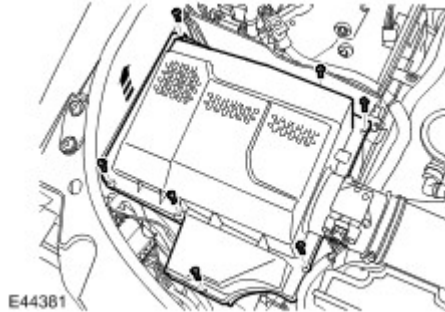

### Installation

- 1 . To install, reverse the removal procedure.  
▶ Clean the base of the air cleaner.  
▶ Check that the drain valve is clear.